



Anziehvorschrift für Zylinderkopf		867.700 passend für / suitable for adaptable à / adaptable a Renault, Nissan, Opel	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			

Schraubenkopf / Head shape
 Tête de vis / Cabeza de tornillo

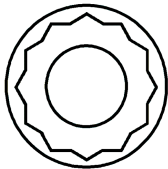

481.900
 M12x1,5x135

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

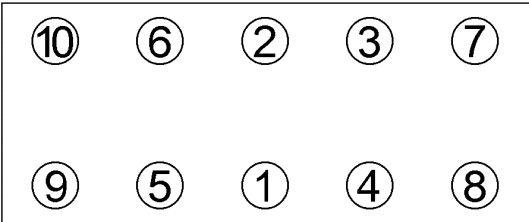

Anziehen/	*	Pos 1-10: 5 Nm
Tightening/		Pos 1-10: 30 Nm
Serrage/	➤	Pos 1-10: 150° ±3°
Apriete	➤	Pos 1-10: 150° ±3

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

 Mot: R9M

 1.6 ltr 66-118 kW (90-160 PS)

 Renault Scénic III, Grand Scénic, Megane III
 Espace, Fluence
 Nissan Qashqai, X-Trail
 Opel Vivaro

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*867.700*
--	------------------