


Anziehvorschrift für Zylinderkopf		888.986 passend für / suitable for adaptable à / adaptable a BMW	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			

Schraubenkopf / Head shape
 Tête de vis / Cabeza de tornillo



802.760
M 10 x 95

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

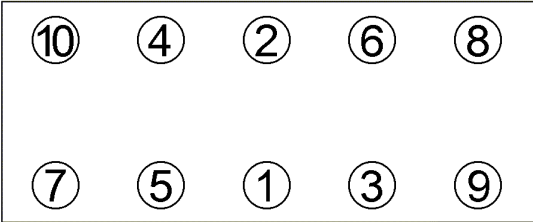

Anziehen/	✱	30 - 35 Nm
Tightening/	➤	90°
Serrage/	➤	90°
Apriete		

Zeichenerklärung / Explanations / Explication / Explicacion

✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

 Mot. M40/M43 B16/B18

 E30 316i, 318i
 E36 316i, 318i, 316g, Z3 1.8
 E46 316i
 E34 518i, 518g

 Ø 84mm, ± 2,0mm (+0,3mm)

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*888.986*
--	------------------