


Anziehvorschrift für Zylinderkopf		893.633 passend für / suitable for adaptable à / adaptable a BMW	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			

Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo	Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
--	---

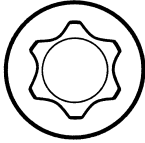

802.810
M 11 x 140

14	10	4	2	6	8	12
11	7	5	1	3	9	13

Anziehen/ Tightening/ Serrage/ Apriete	> 1988 * 50 - 60 Nm ● 15 min ➤ 75° ★ 25 min ➤ 85° - 95°	1989 > * 50 - 60 Nm ● 15 min ➤ 90° ★ 25 min ➤ 90°
---	--	--

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Mot. M21 D24

E30 324d, td → 12/1988
 E28 524d, td
 E34 524td

80 Ø, ±1,87 mm,
 3 Löcher, Holes, Trous, Agujeros, Fori

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*893.633*
--	------------------