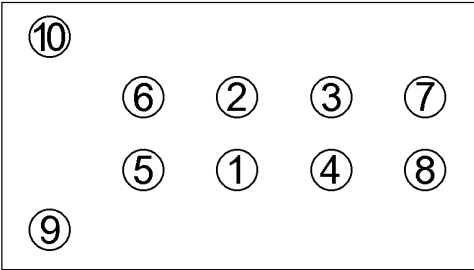


Anziehvorschrift für Zylinderkopf Tightening Instructions for Cylinder Head Instructions de serrage pour culasse Prescripciones de apriete para culatas		895.710 passend für / suitable for adaptable à / adaptable a Opel	 Das Original	
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 125.920 M8x1,25x119				
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤	25 Nm 60° 60° 60°		
Zeichenerklärung / Explanations / Explication / Explicacion				
* ➤	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor Reparaturstufe 1. 0,8 mm 1,0 ltr. 3 Cyl. DOHC Mot. X 10 XE, Z 10 XE Corsa B, Corsa C, Agila A				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*895.710*		