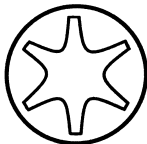
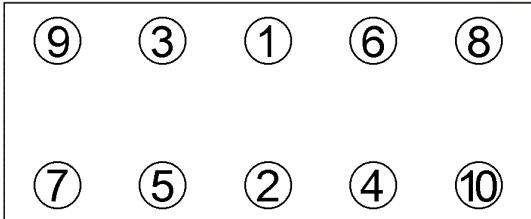


Anziehvorschrift für Zylinderkopf		902.620 passend für / suitable for adaptable à / adaptable a Ford/Changan	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
087.830 M 10x1,5x143				
Anziehen/ Tightening/ Serrage/ Apriete	✱ ➤	5 Nm 15 Nm 35 Nm 75°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø 79,8 mm; $\frac{1}{8}$: 0,32 mm				
Mot: HXJA; RHBA; PNBA				
1,6 ltr. Duratec TI-VCT				
110; 115; 120; 123 PS				
Ford 1.6L 16V C6				
Fiesta CB1 → 07/2008; Focus C-Max CB3 → 03/2007				
Focus CB4 → 12/2007; Mondeo CA2 → 02.2007				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*902.620*		