

Anziehvorschrift für Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

913.902

passend für / suitable for  
adaptable à / adaptable a


Mercedes-Benz




Das Original

Schraubenkopf / Head shape  
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

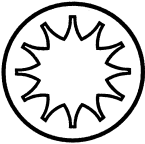

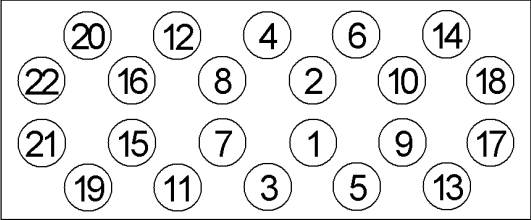

820.114  
M 10x80/102/115

Anziehen/  
Tightening/  
Serrage/  
Apriete

> 12/1988

✱ 25 Nm M 8: 25 Nm

● 10 min

➤ 90°

➤ 90°

01/1989 >

✱ 15 Nm

➤ 90°

● 10 min

➤ 90°

Zeichenerklärung / Explanations / Explication / Explicacion

|   |                                             |                              |                                |                                       |
|---|---------------------------------------------|------------------------------|--------------------------------|---------------------------------------|
| ✱ | neue Zylinderkopf-schrauben verwenden       | use new cylinder head bolts  | utiliser des vis neuves        | emplar tornillos nuevos               |
| ★ | Warmlauf (80°C)                             | warm up time (80°C)          | chauffage (80°C)               | calentamiento (80°C)                  |
| ☐ | Schrauben einzeln lösen und wieder anziehen | loosen and tighten each bolt | deserrer et serrer vis par vis | aflojar y apretar tornillo a tornillo |
| ● | Setzzeit                                    | relaxation time              | durée de tassement             | tiempo de espera                      |
| ➤ | Drehwinkel                                  | torque angle                 | angle de serrage               | ángulo de giro                        |

Motortyp / Engine type / Type de moteur / Tipo de motor

90,5 mm Ø, 1,97 mm ÷

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

\*913.902\*