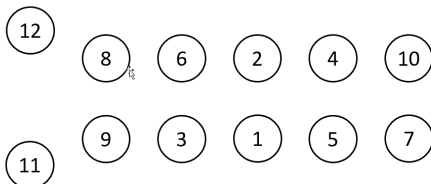


Anziehvorschrift für Zylinderkopf		939.490		 Das Original			
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a FIAT					
Instructions de serrage pour culasse							
Prescripciones de apriete para culatas							
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete					
							
Anziehen/ Tightening/ Serrage/ Apriete		* 1-10 20 Nm 1-10 40 Nm 11-12 15 Nm		➤ 1-10 90° ➤ 1-10 90° 11-12 30 Nm			
Zeichenerklärung / Explanations / Explication / Explicacion							
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos			
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)			
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo			
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera			
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro			
Motortyp / Engine type / Type de moteur / Tipo de motor							
Mot : 1,6 ltr. E-TORQ							
FIAT : 500X, EGEA, TIPO							
Jeep : Renegade							
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601				*939.490*			