


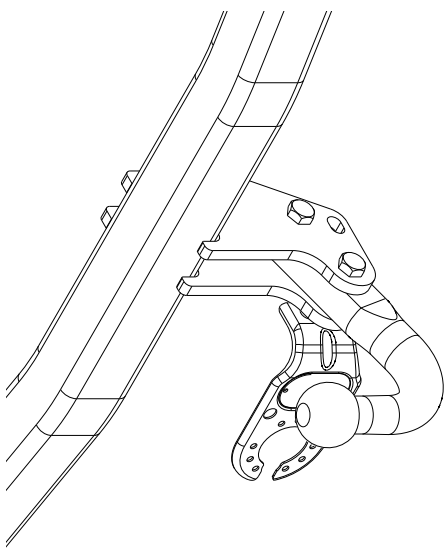
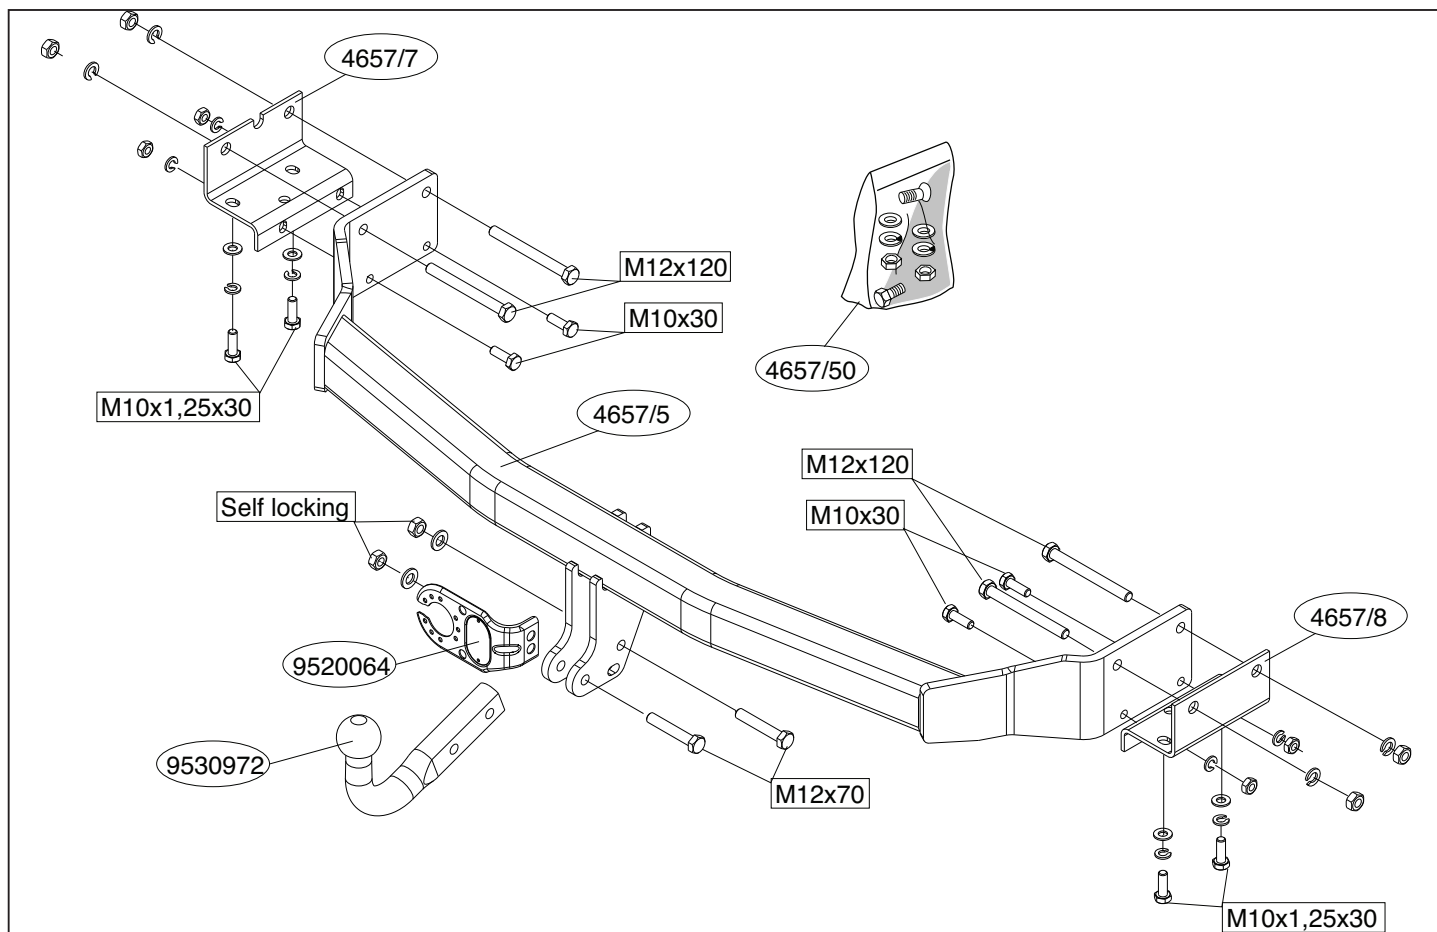
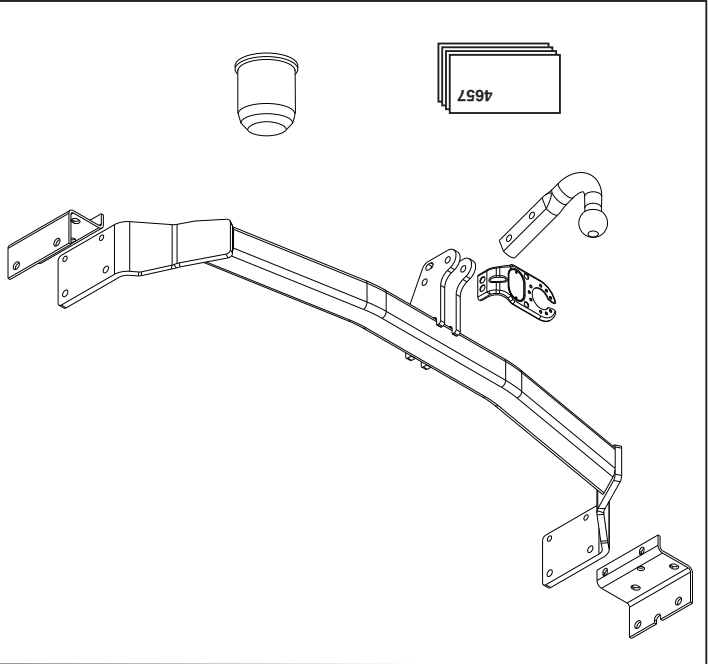
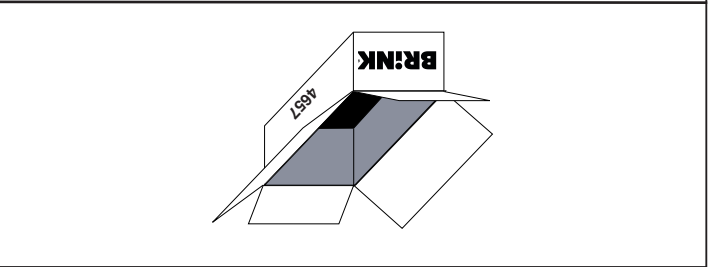


Fitting instructions
Make: Hyundai
Santa Fe (CM); 2006->
Type: 4657




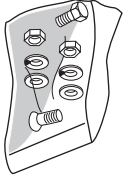


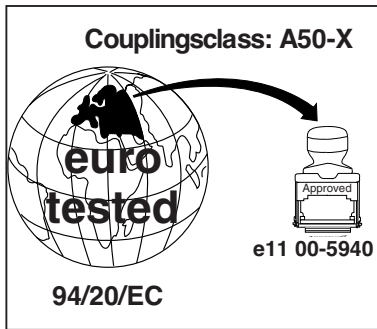



																							
 <table><tr><td>(4x) M10x30</td><td></td></tr><tr><td>(4x) M10x1,25x30</td><td></td></tr><tr><td>(4x) M12x120</td><td></td></tr><tr><td>(2x) M12x70</td><td></td></tr><tr><td>(4x) M10</td><td></td></tr><tr><td>(2x) M12</td><td></td></tr><tr><td>(4x) M12</td><td></td></tr><tr><td>(8x) M10</td><td></td></tr><tr><td>(4x) M10</td><td></td></tr><tr><td>(4x) M12</td><td></td></tr><tr><td>(2x) self-locking M12</td><td></td></tr></table>	(4x) M10x30		(4x) M10x1,25x30		(4x) M12x120		(2x) M12x70		(4x) M10		(2x) M12		(4x) M12		(8x) M10		(4x) M10		(4x) M12		(2x) self-locking M12		
(4x) M10x30																							
(4x) M10x1,25x30																							
(4x) M12x120																							
(2x) M12x70																							
(4x) M10																							
(2x) M12																							
(4x) M12																							
(8x) M10																							
(4x) M10																							
(4x) M12																							
(2x) self-locking M12																							

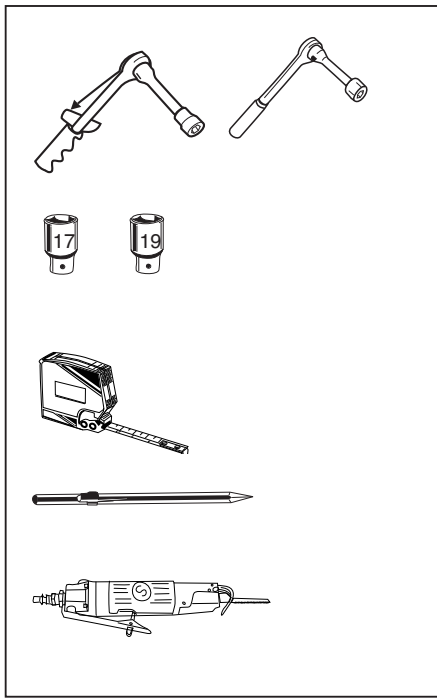



D-Value : 12,5 kN

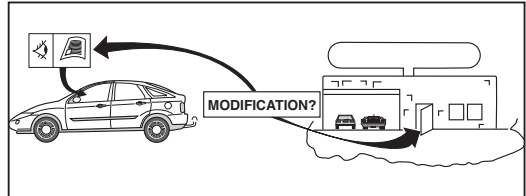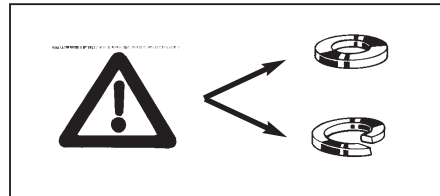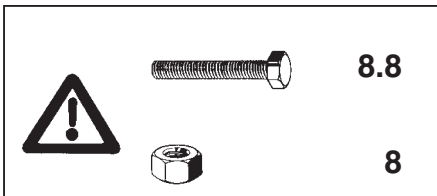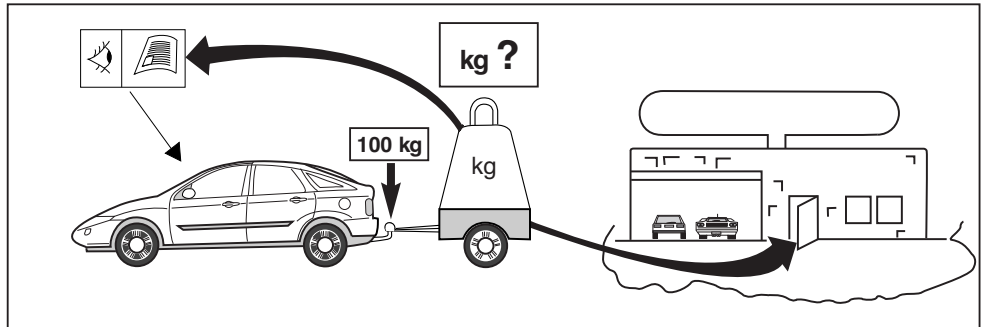




© 465770/25-01-2012/3

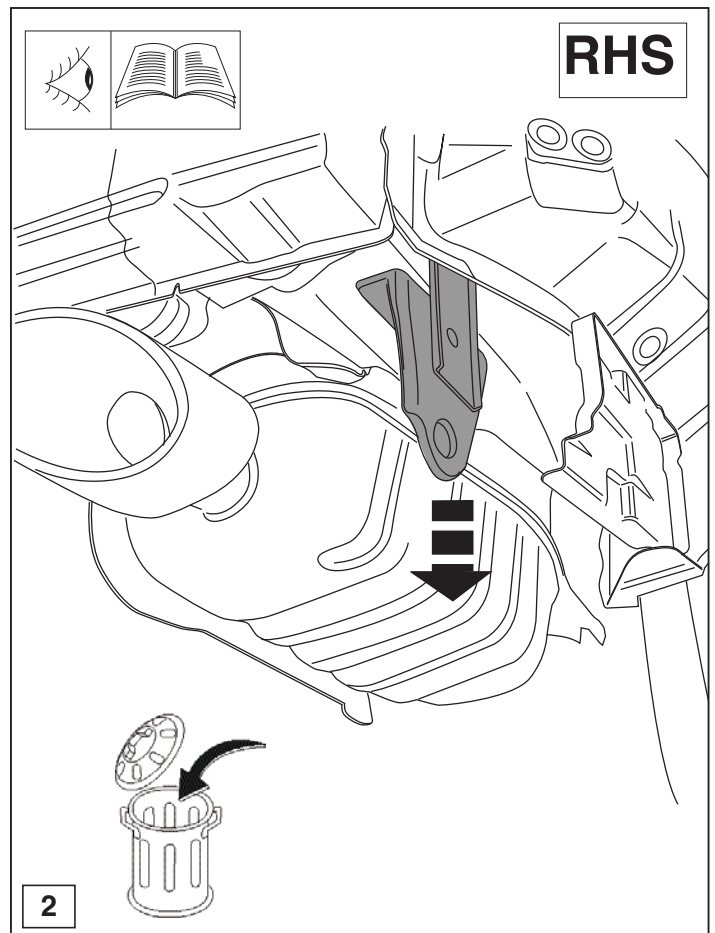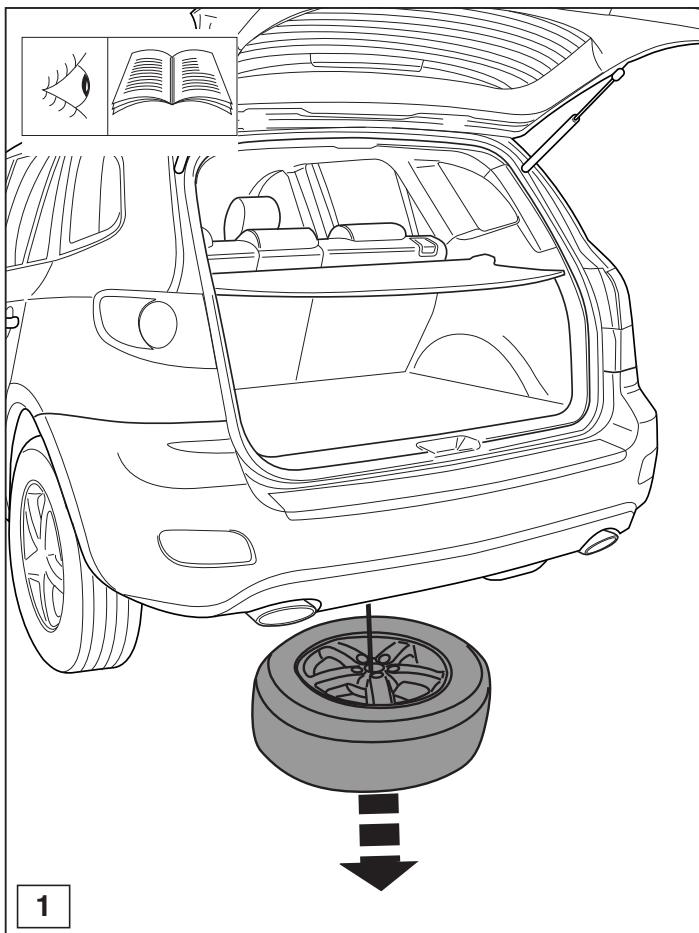




© 465770/25-01-2012/5

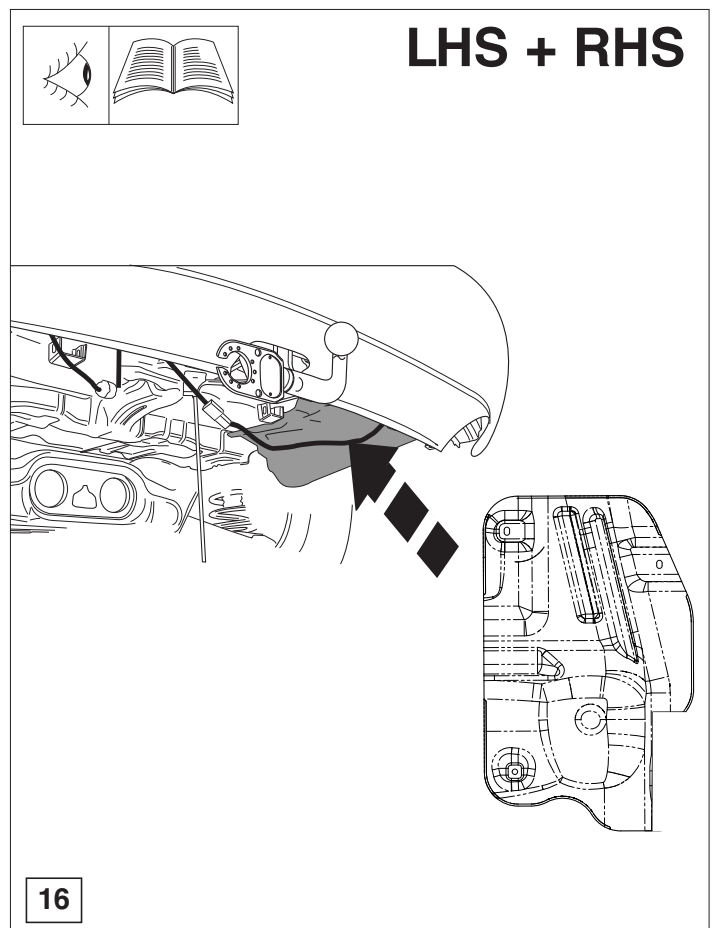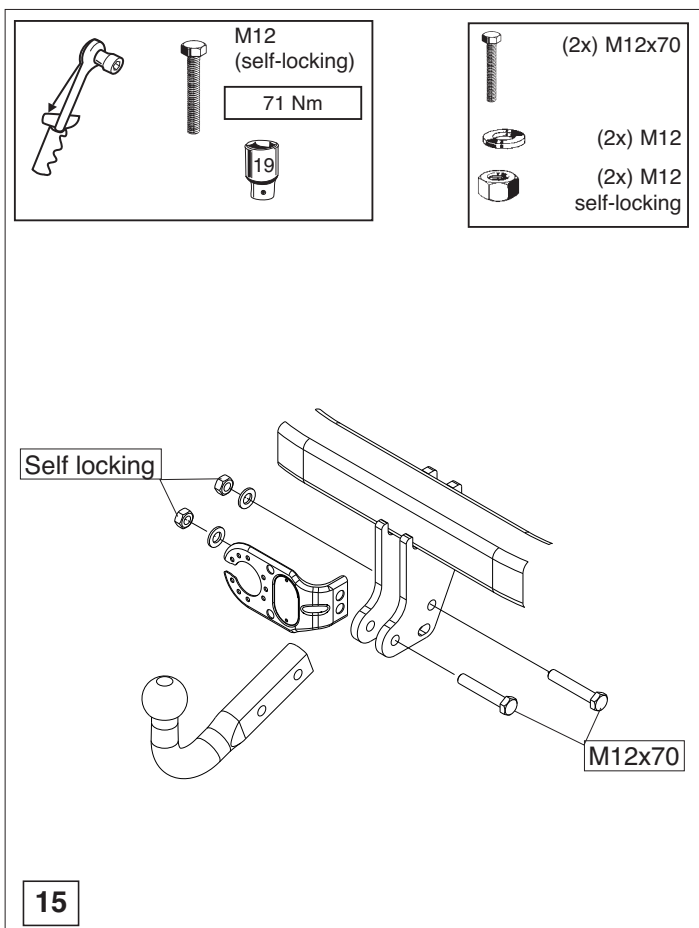


© 465770/25-01-2012/14

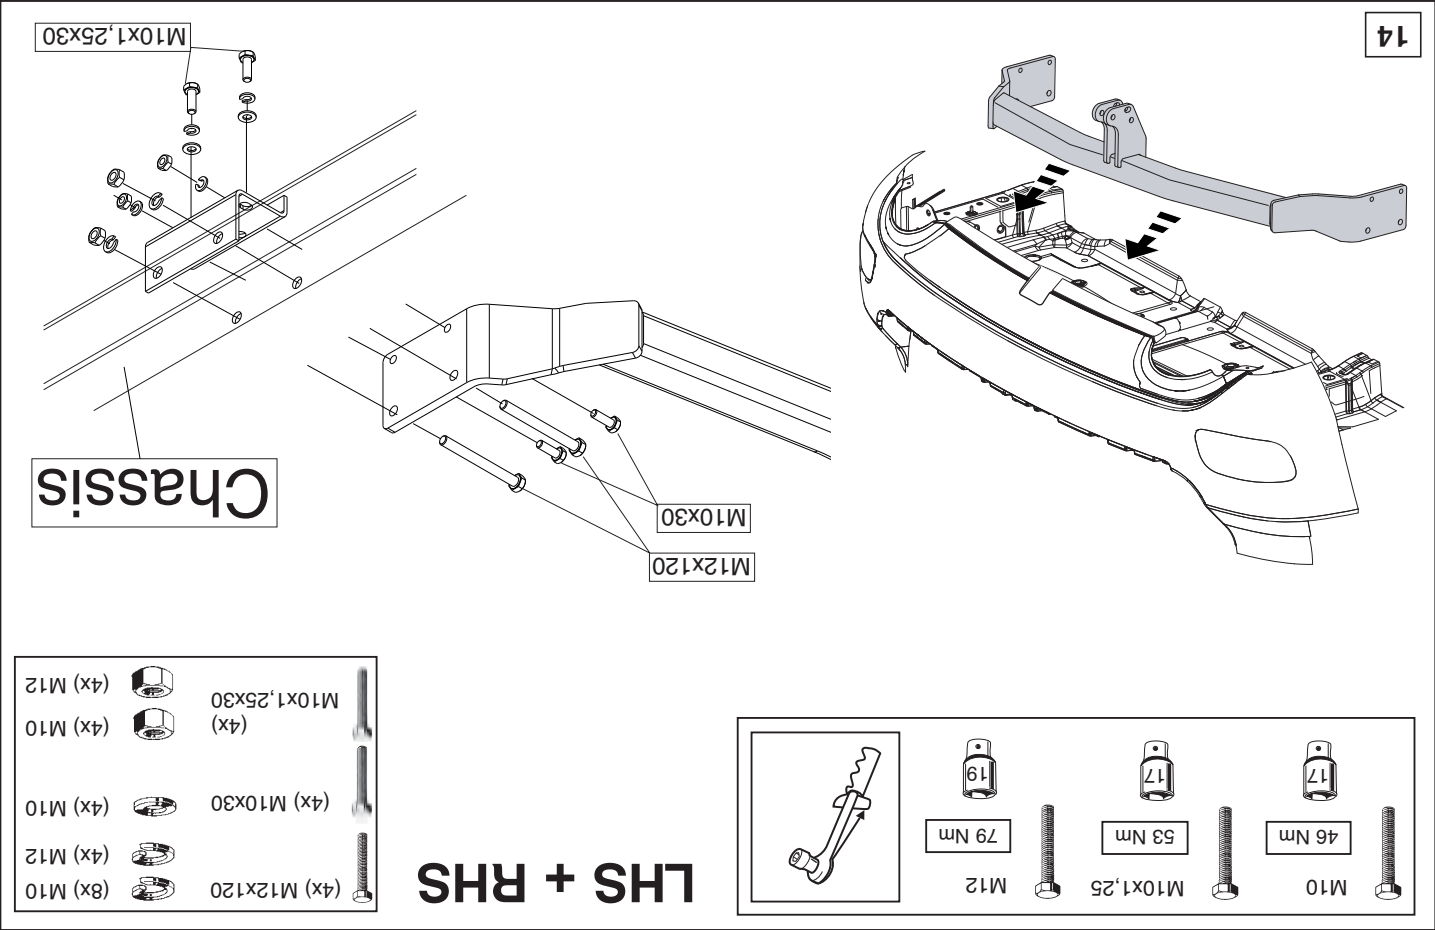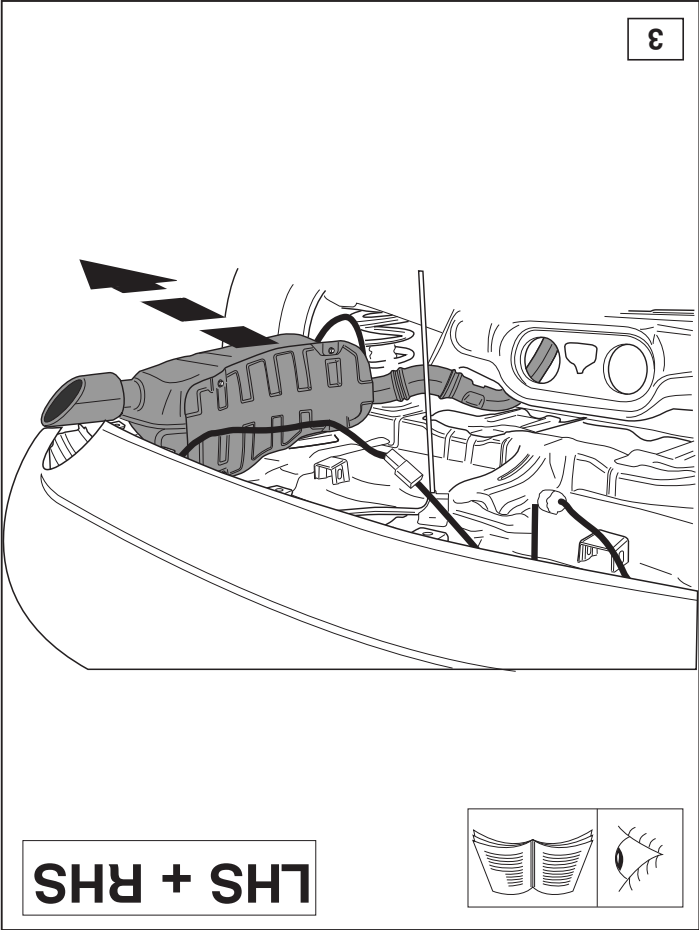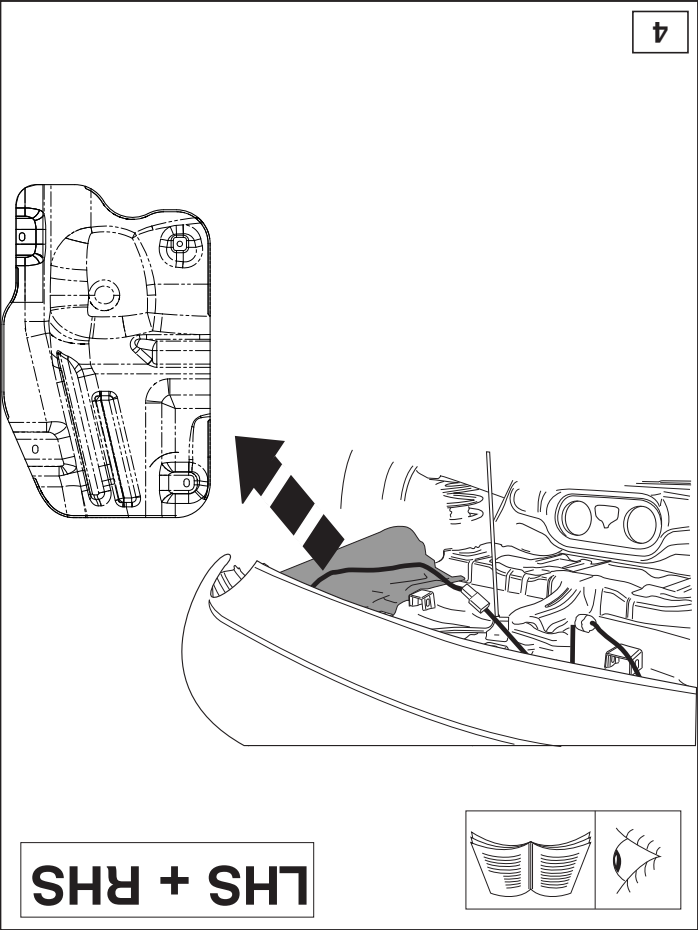

LHS + RHS

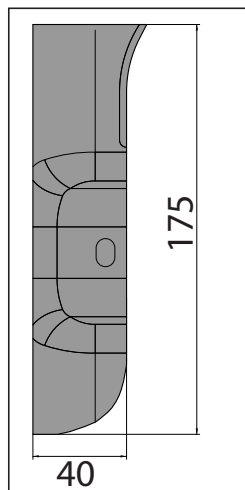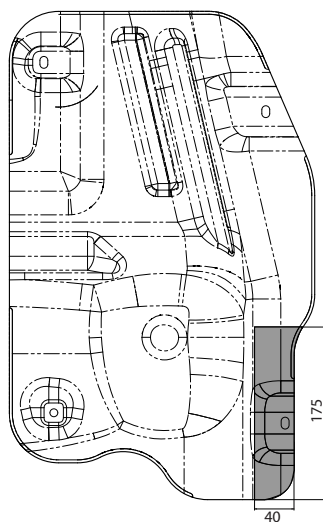
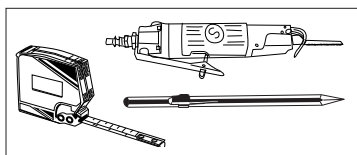


5

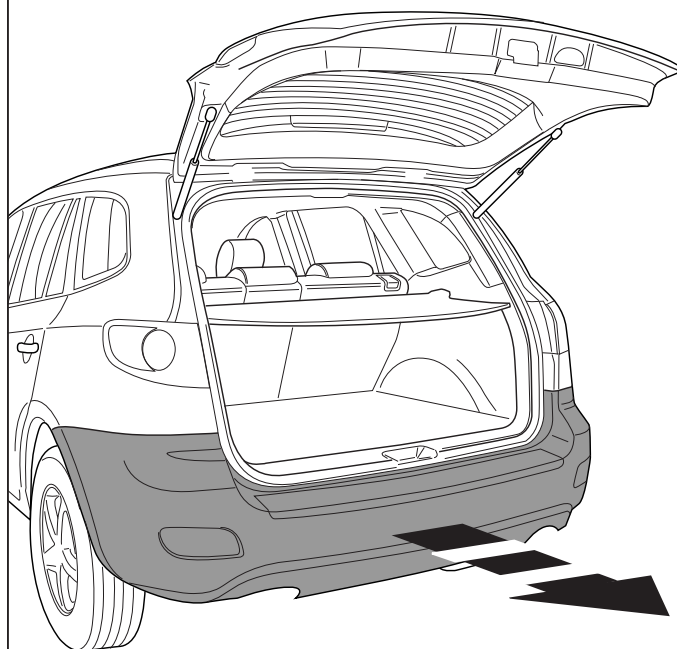





6



© 465770/25-01-2012/7

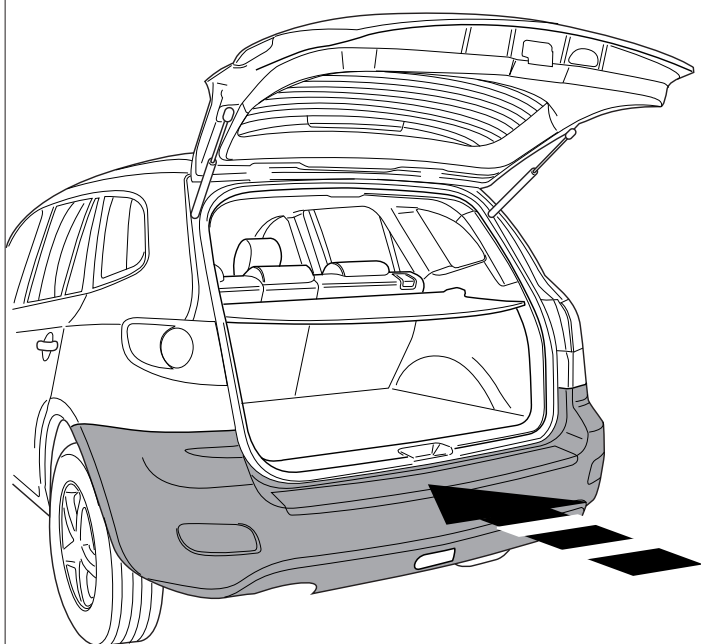



13

© 465770/25-01-2012/12

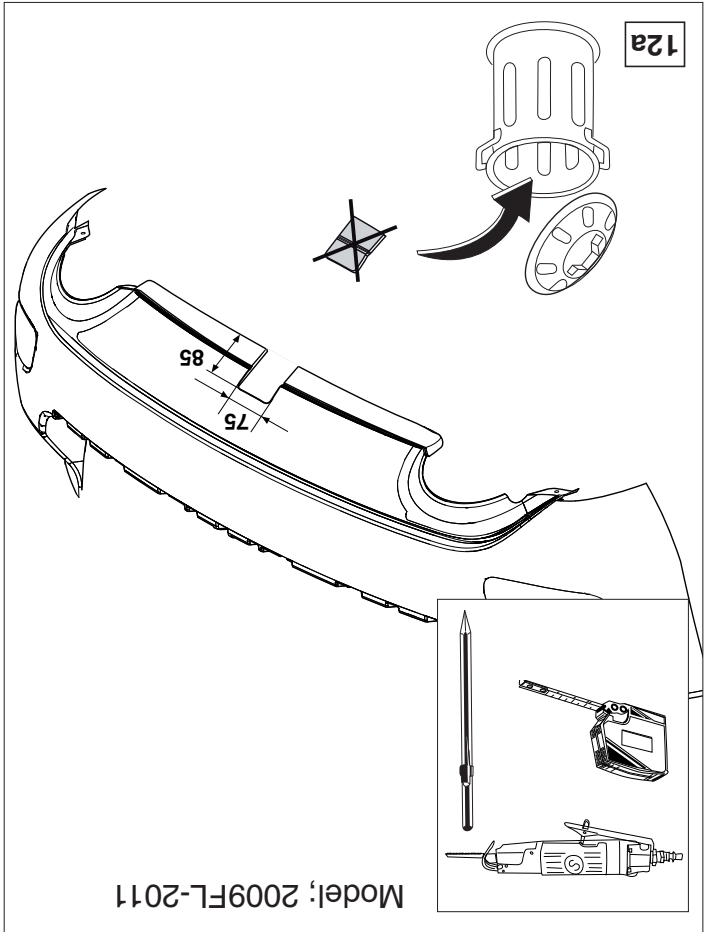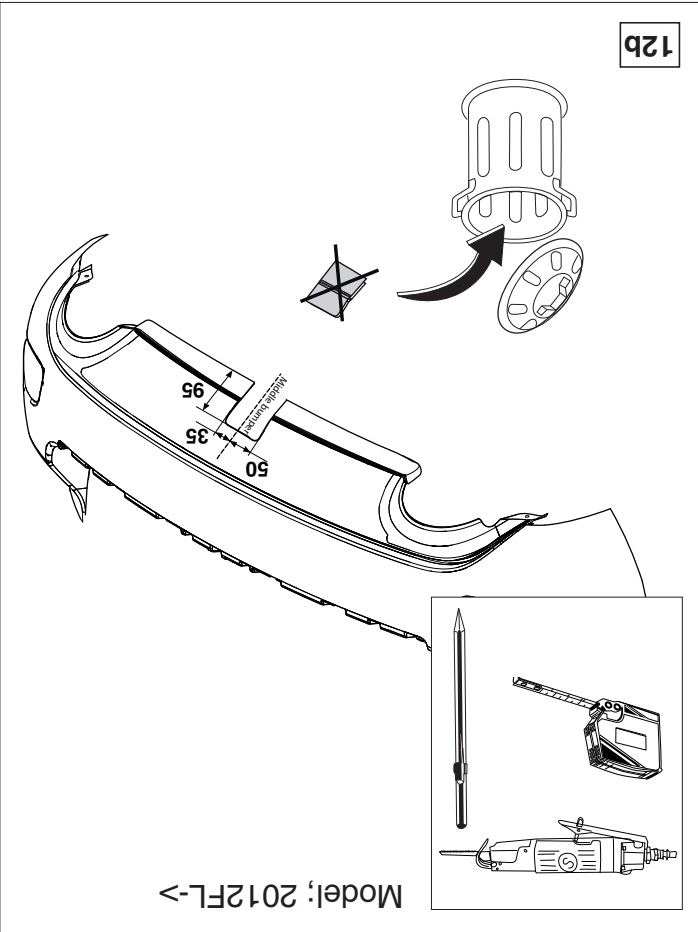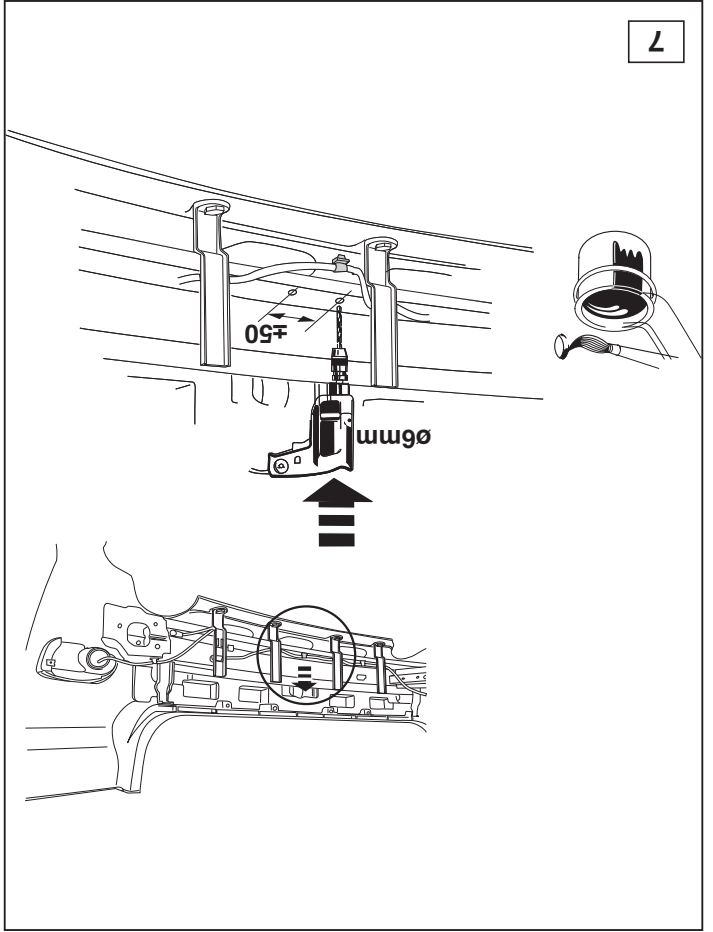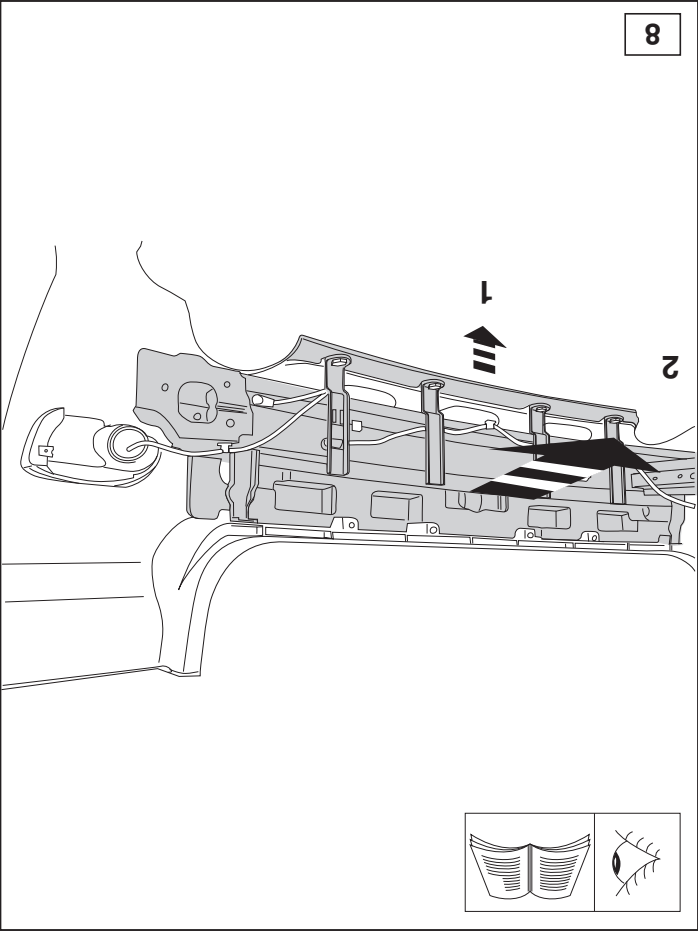

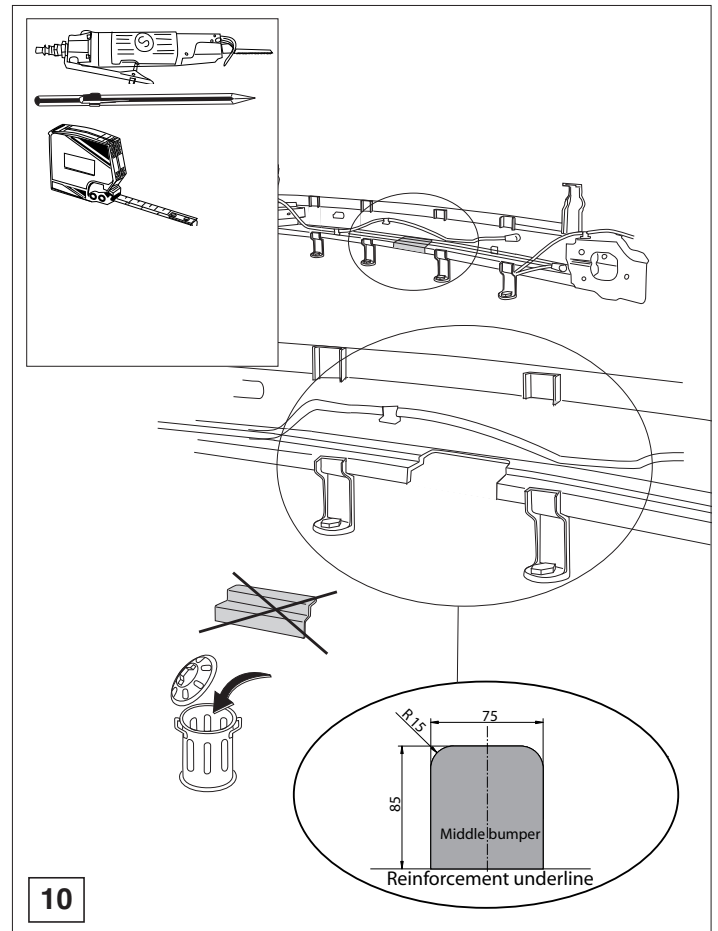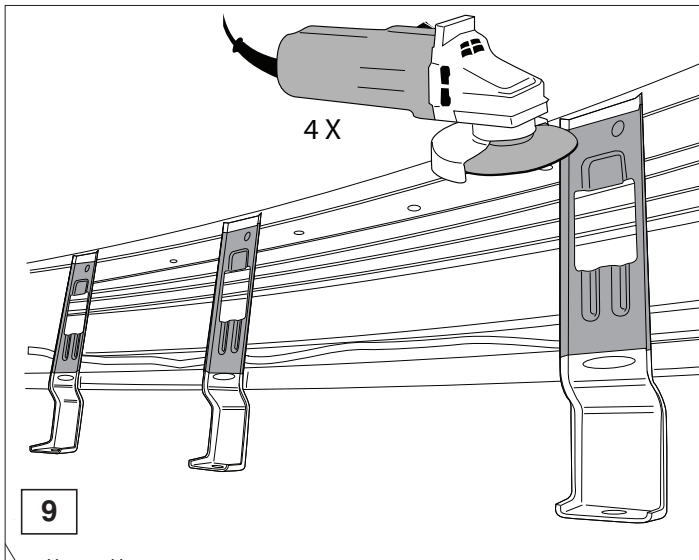

© 465770/25-01-2012/9

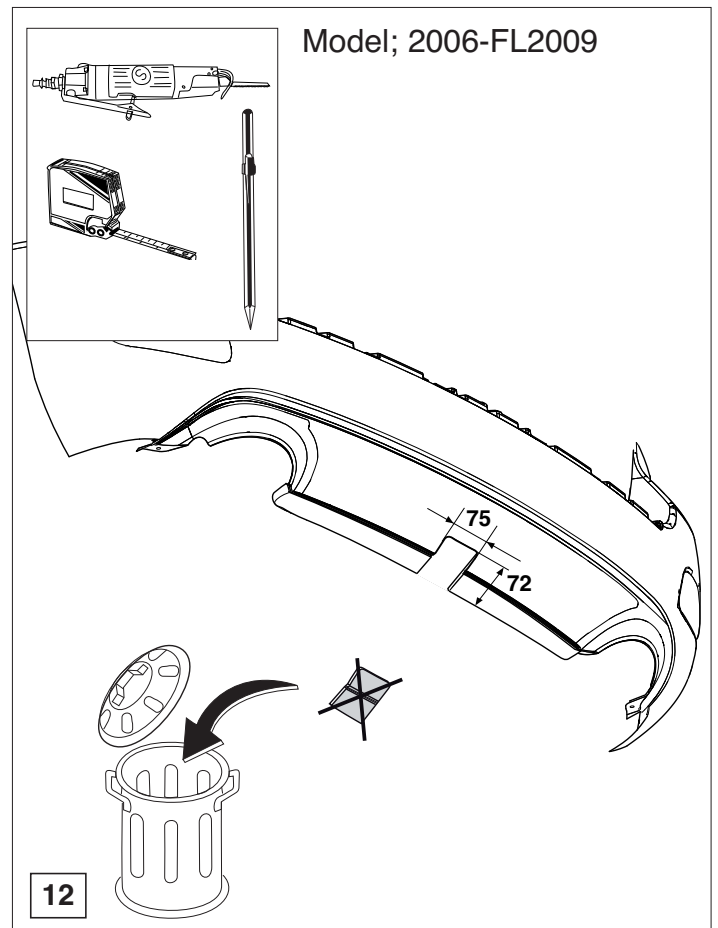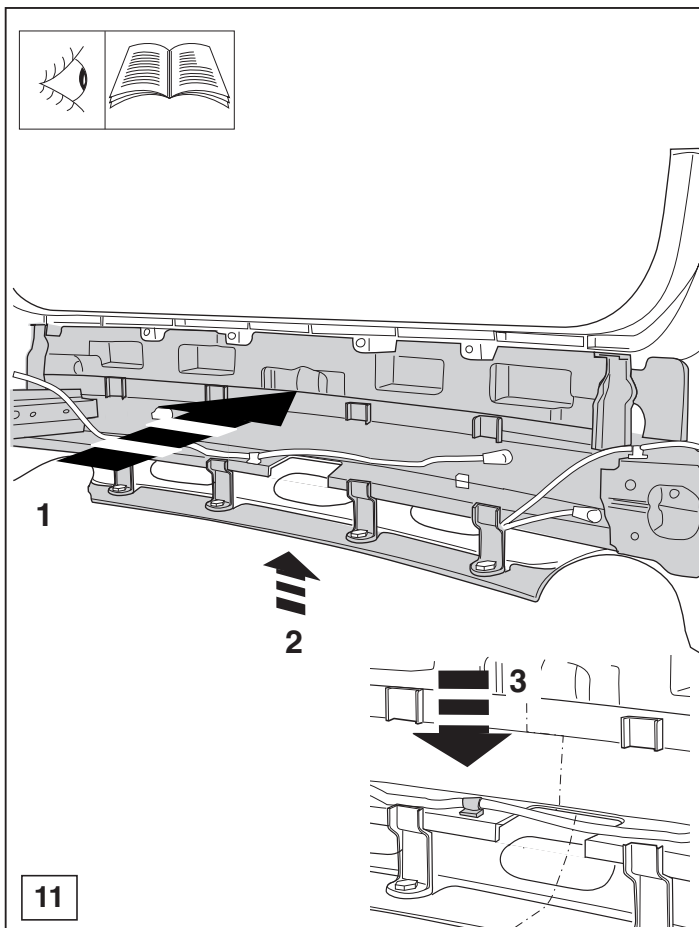

© 465770/25-01-2012/10