

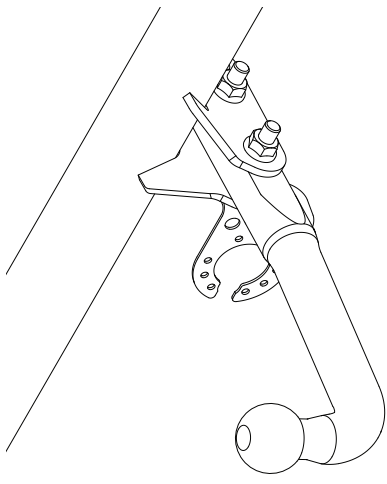



Fitting instructions
Make: Renault
Laguna III; 2007 ->
Type: 5093



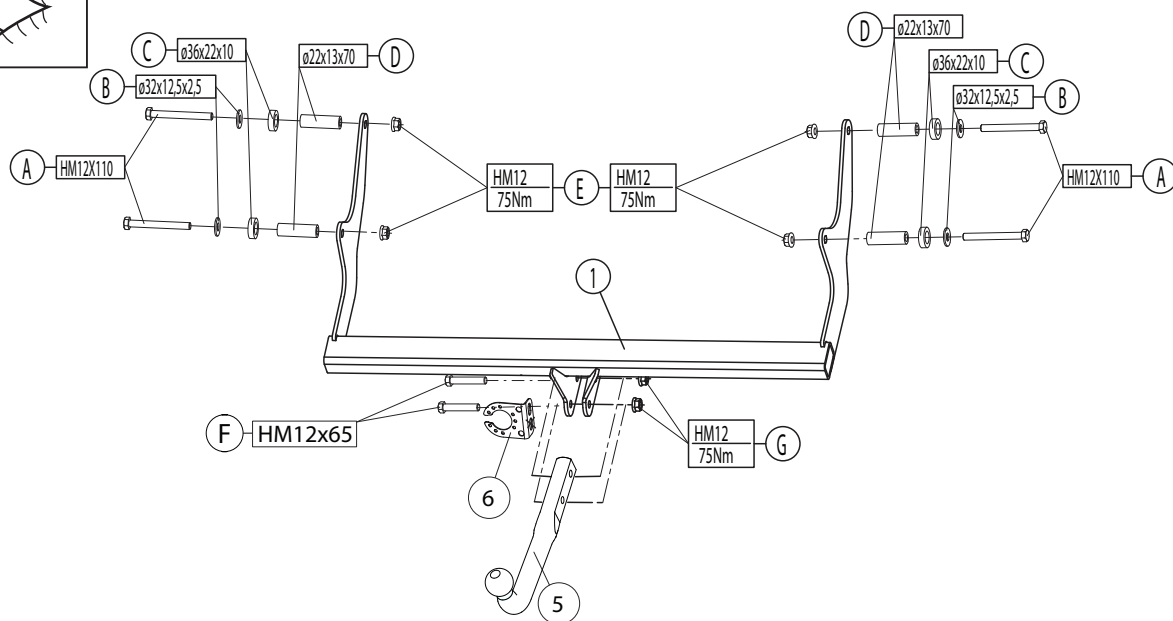


ser.nr:

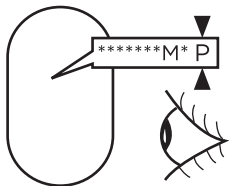

© 509370/22-10-2009/1

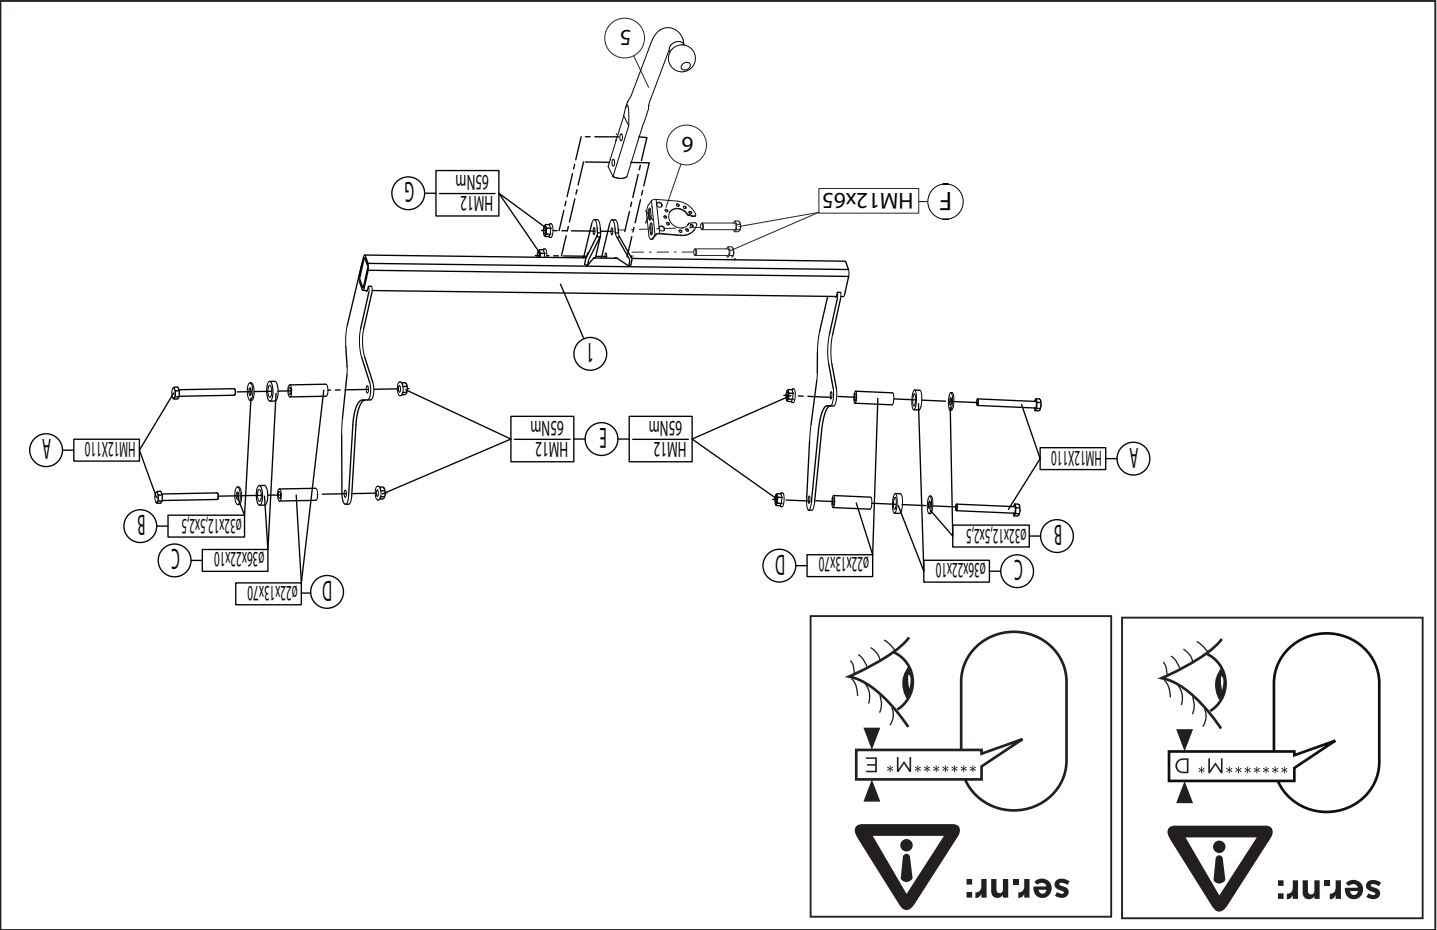

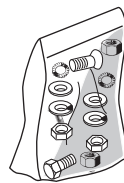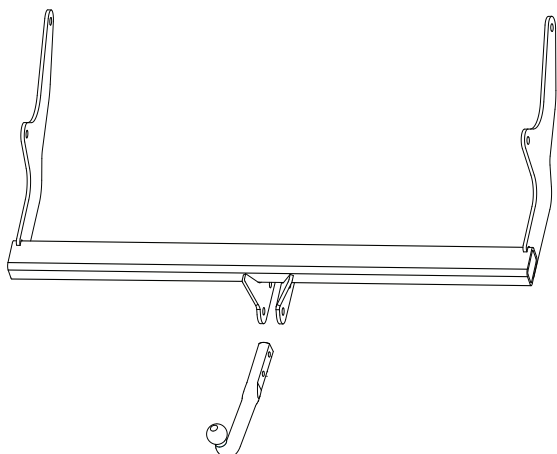

(2x) M12x65



(4x) 22x13,5x70



(4x) M12x110











(4x) 36x22x10




(6x) M12



(4x) 32x12,5x2,5

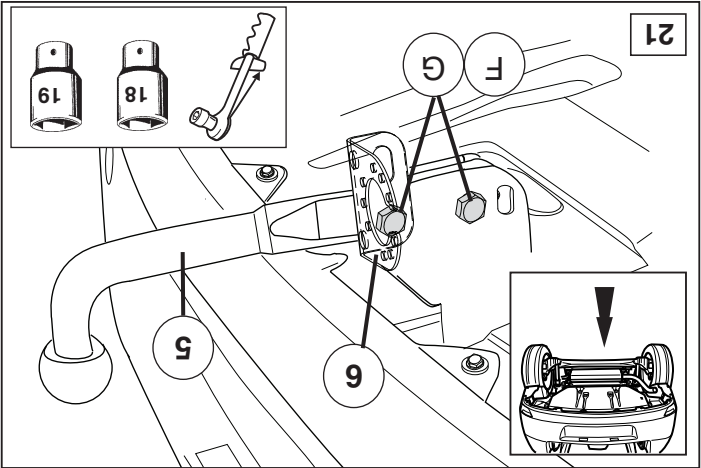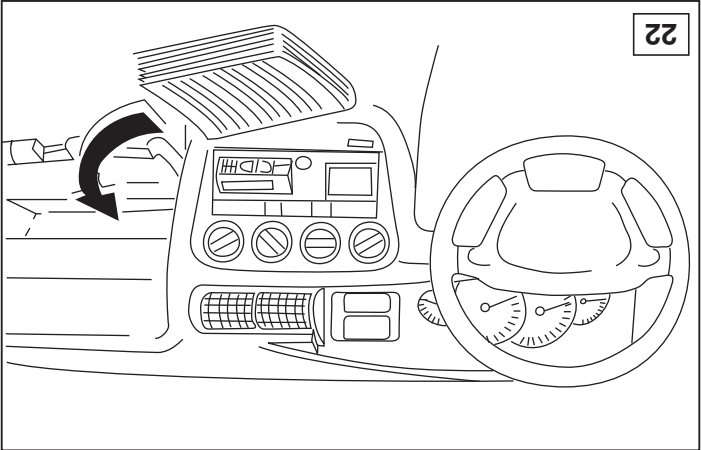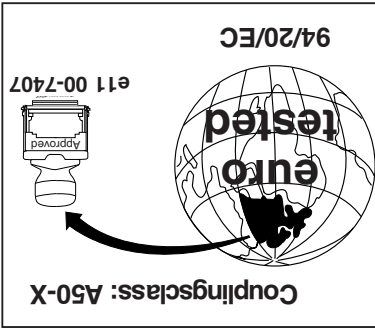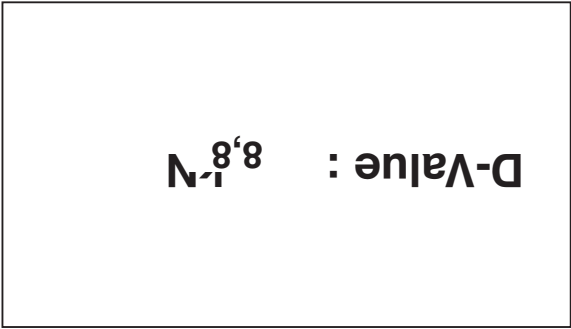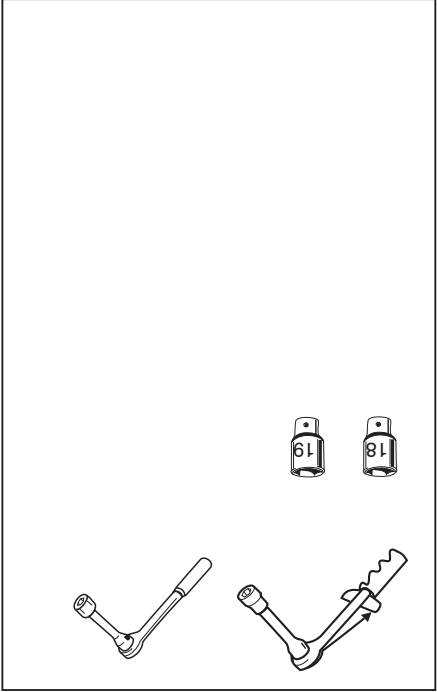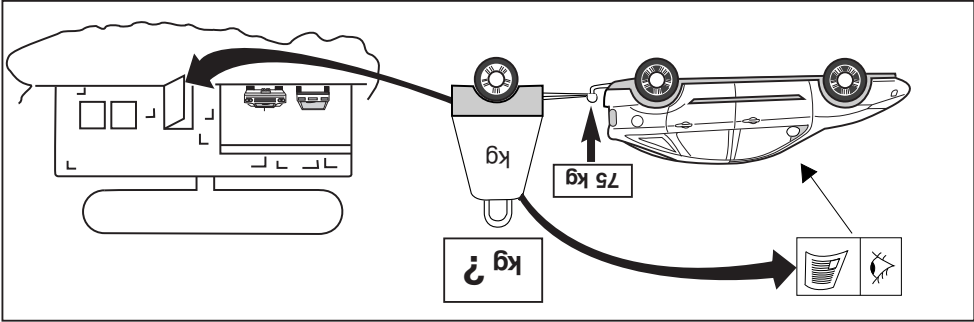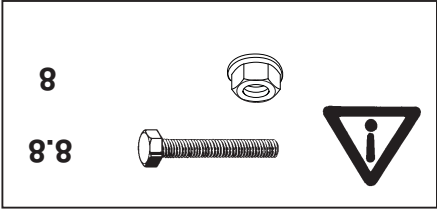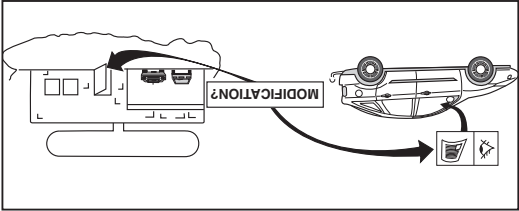

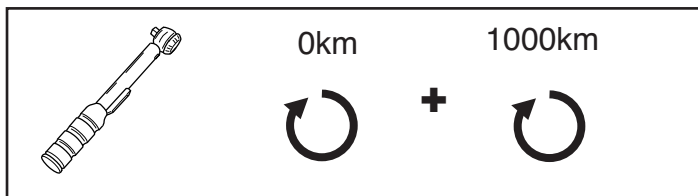

NOTE:

* Should this installation process entail the cutting of the bumper – confirmation **MUST** be obtained by the installation engineer of the customer's acceptance prior to completion. Brink Towing Systems do not accept responsibility for any matters arising as a result of this miscommunication.

All measurements are in mm!





HINWEISE:

* Die für das Fahrzeug zugelassene Anhängelast ist den Fahrzeug Unterlagen zu entnehmen. Bei Änderungen des Fahrzeuggewichtes muß die höchstzulässige Anhängelast gegebenenfalls aus dem D-Wert nachgerechnet werden.









Auskunft hierüber kann Ihr Fachhändler oder der TÜV geben.





* Elektrische Anlage gemäß StVZO anbringen.

© 509370/22-10-2009/5

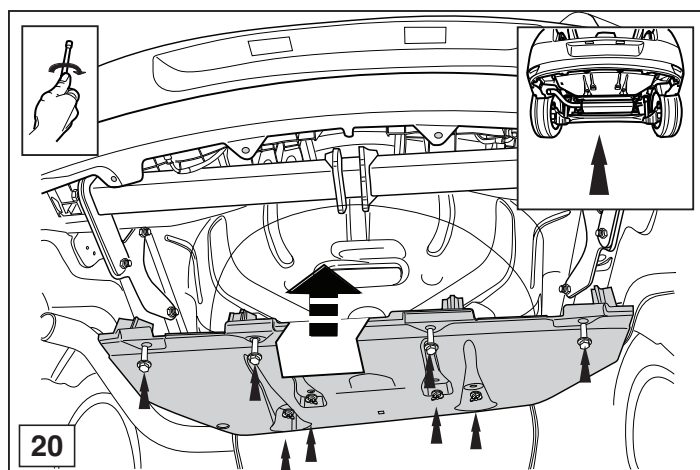
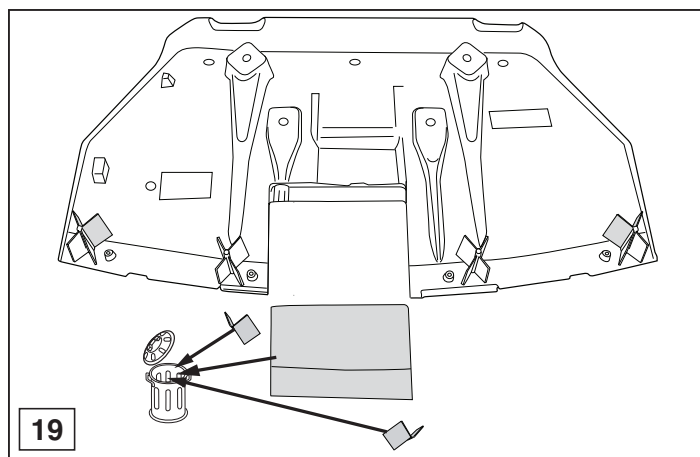
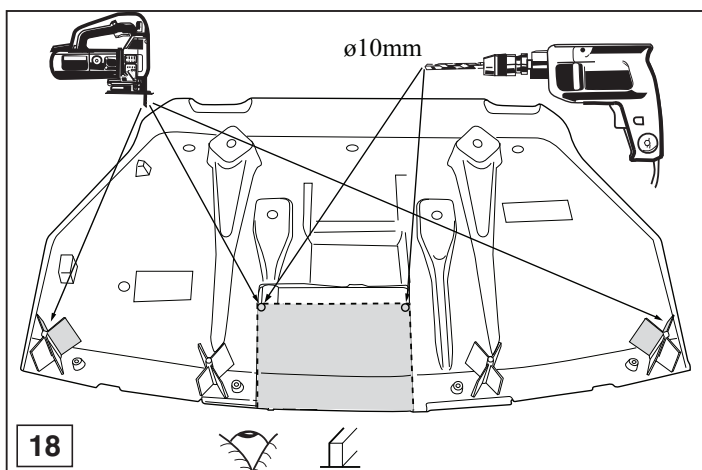
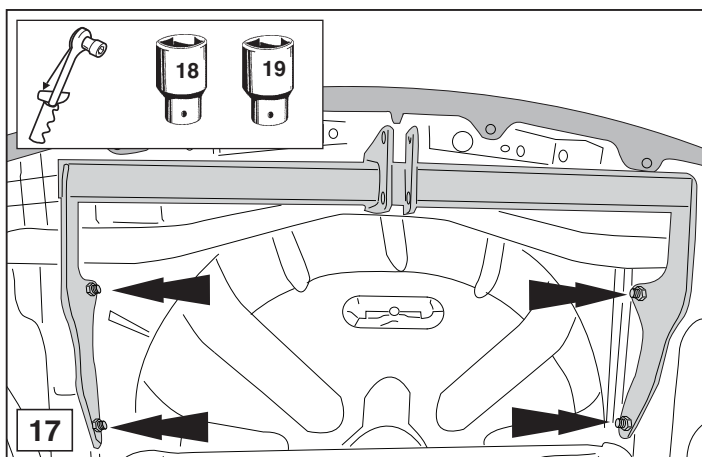


© 509370/22-10-2009/10

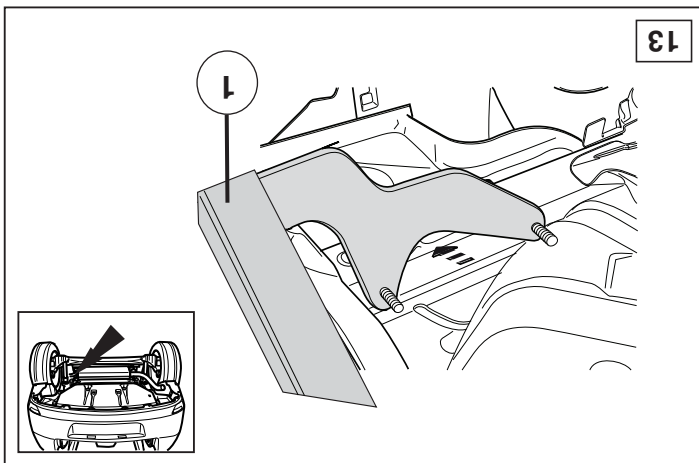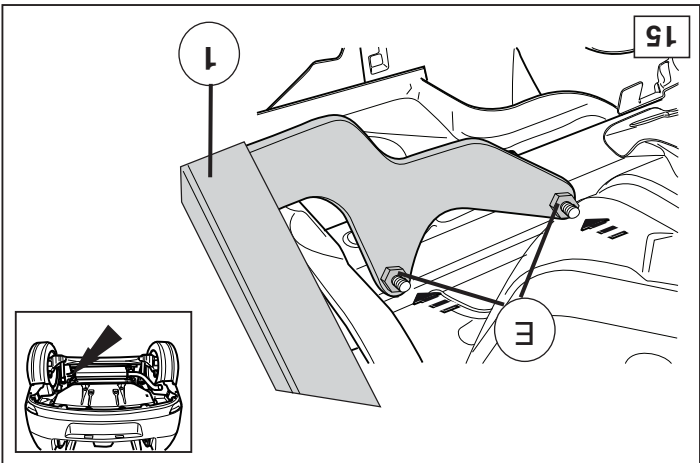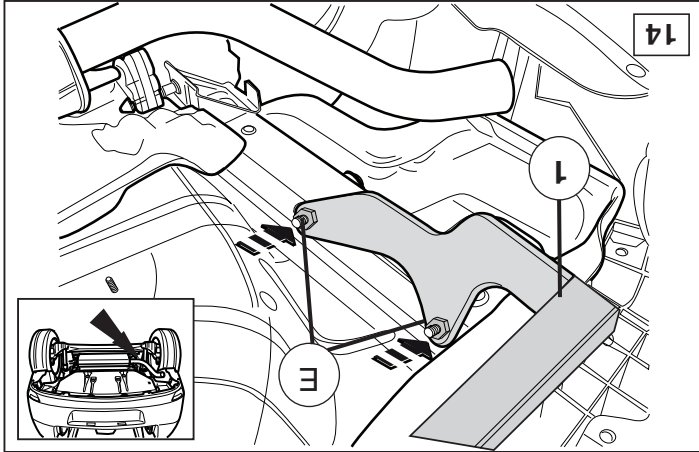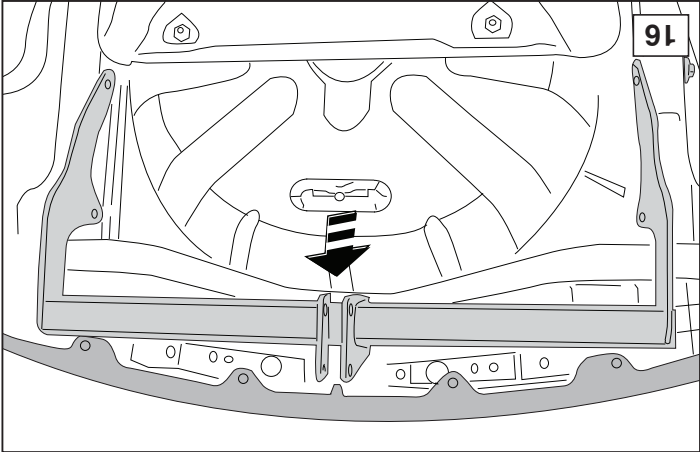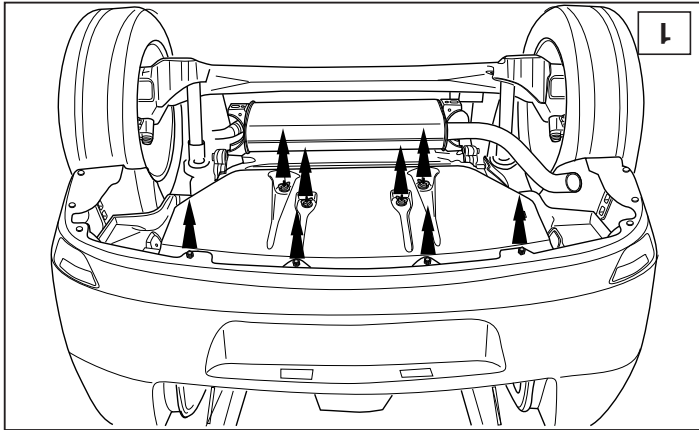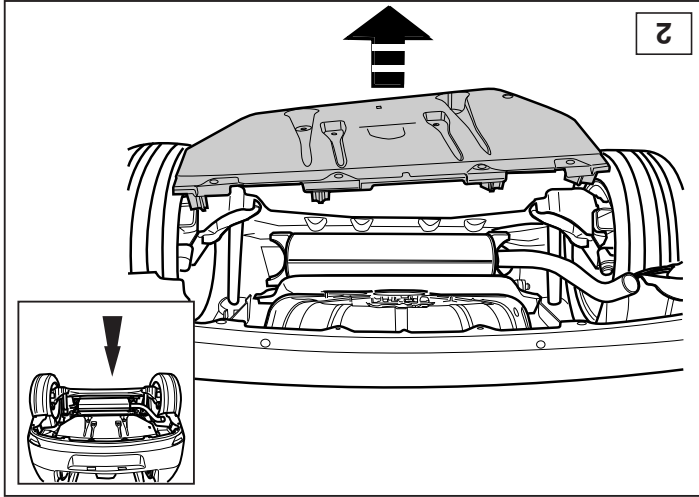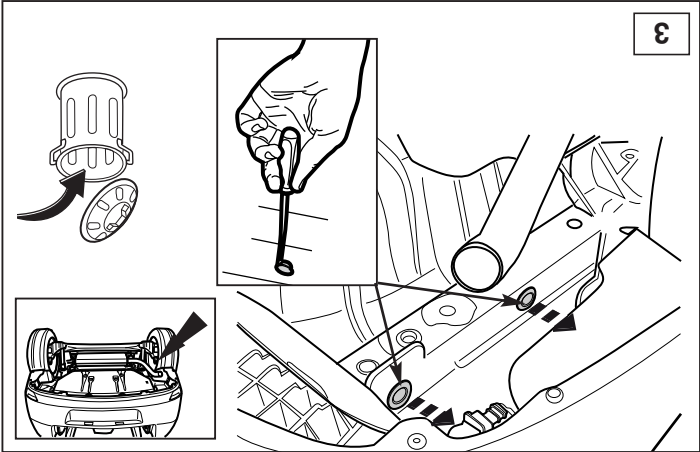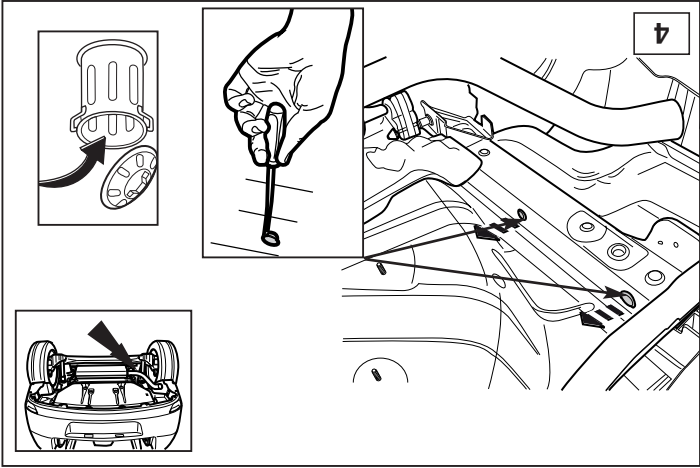

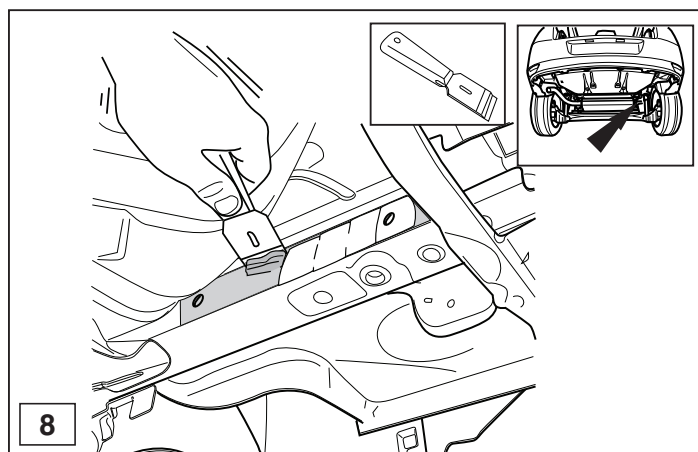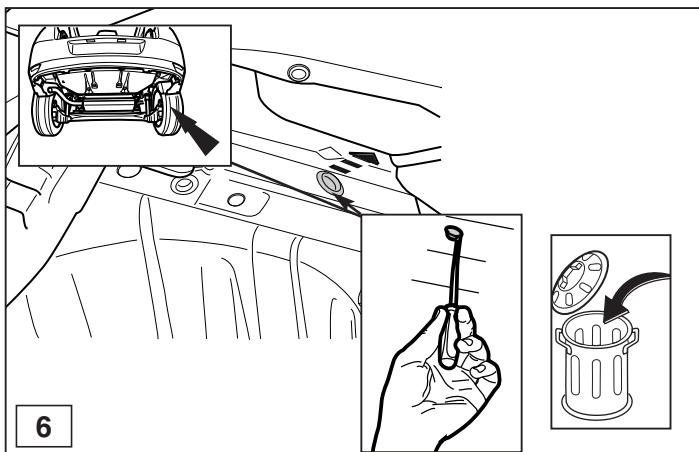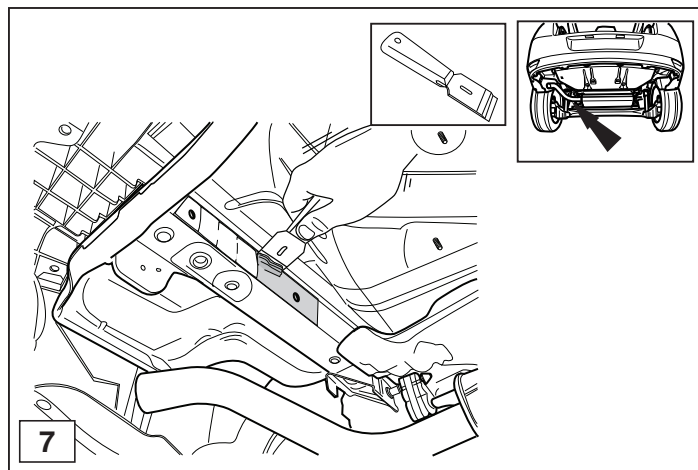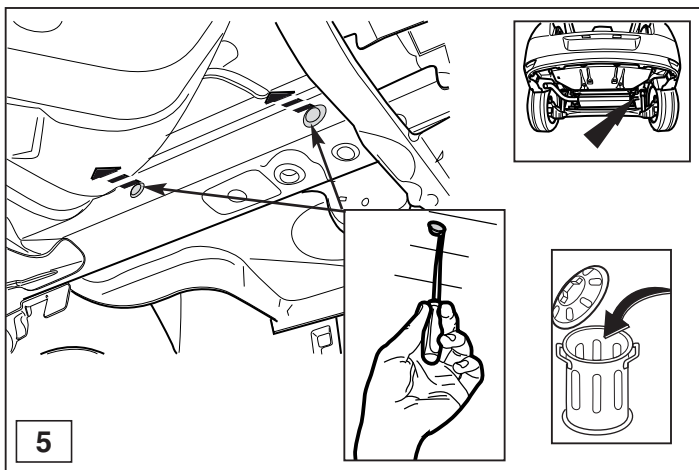

© 509370/22-10-2009/7

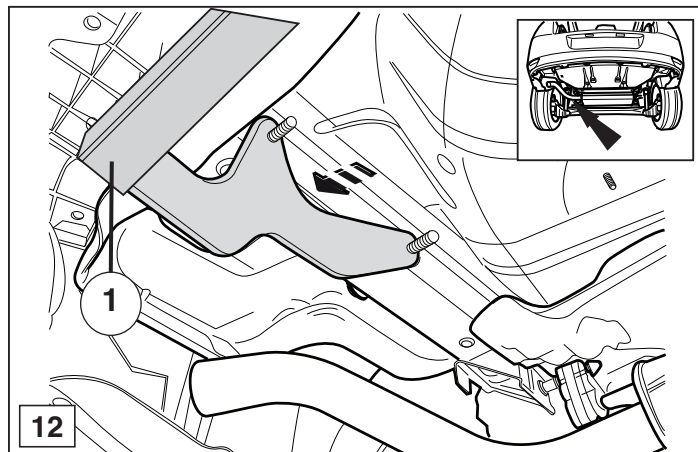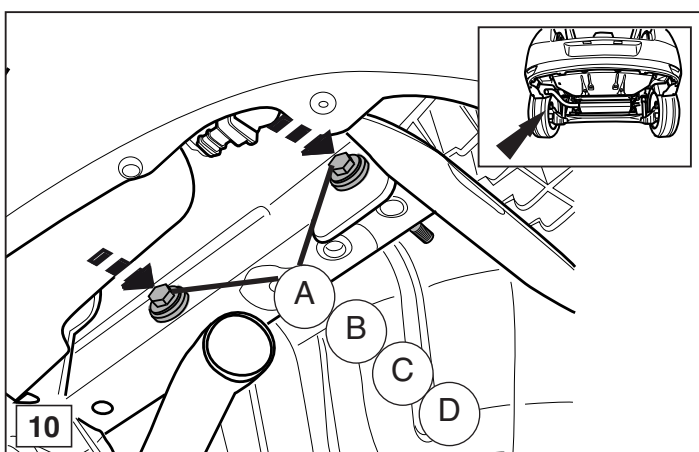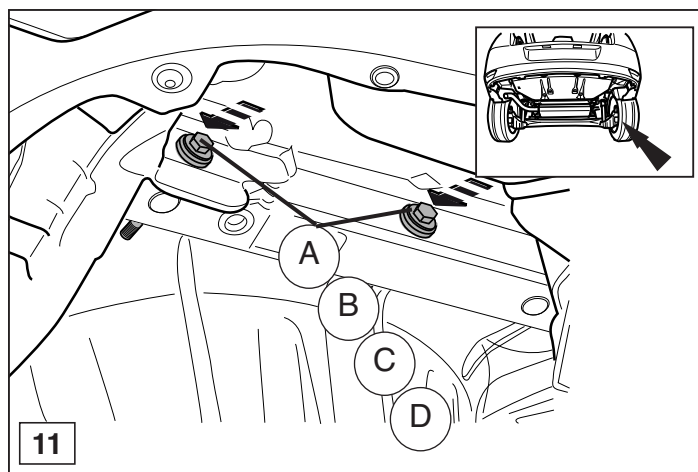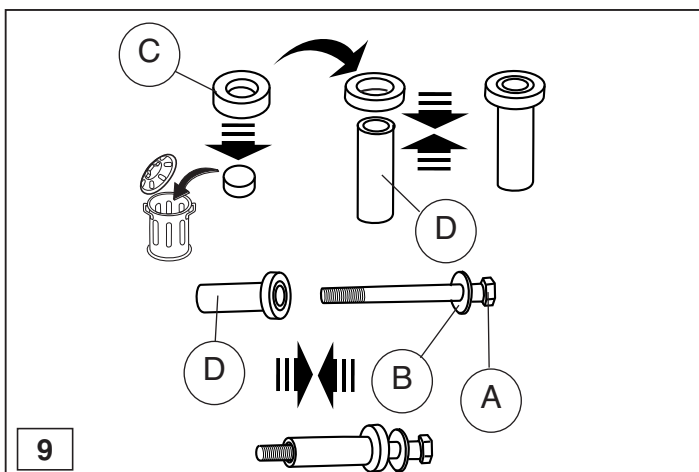

© 509370/22-10-2009/8