

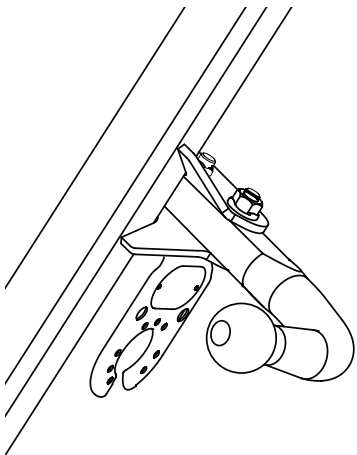



Fitting instructions
Make: Renault
Laguna III; 2007->
Type: 5091

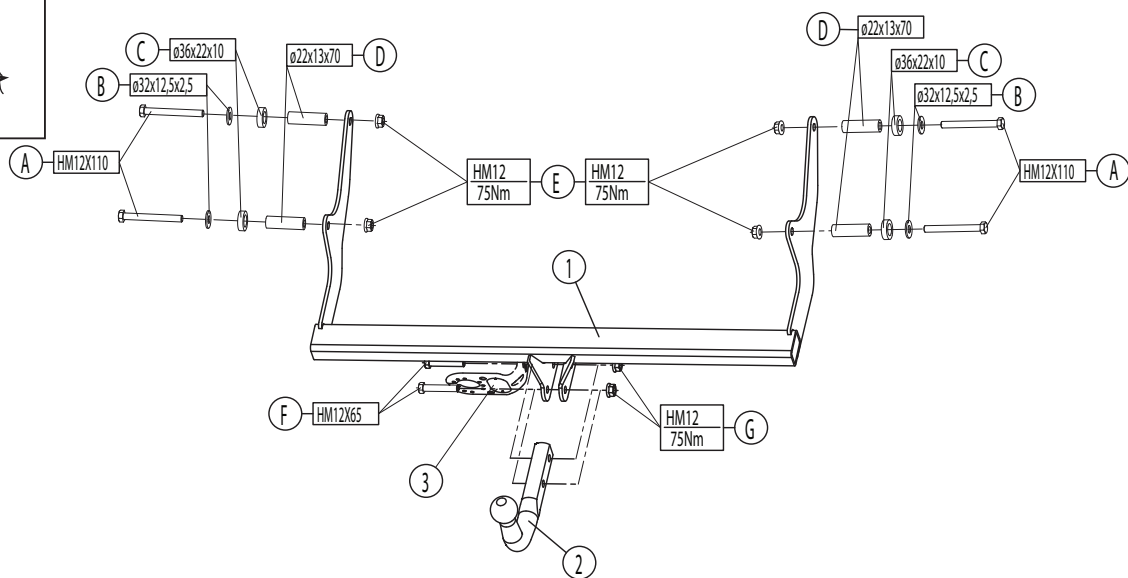








ser.nr:

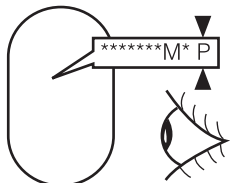


© 509170/23-09-2009/1

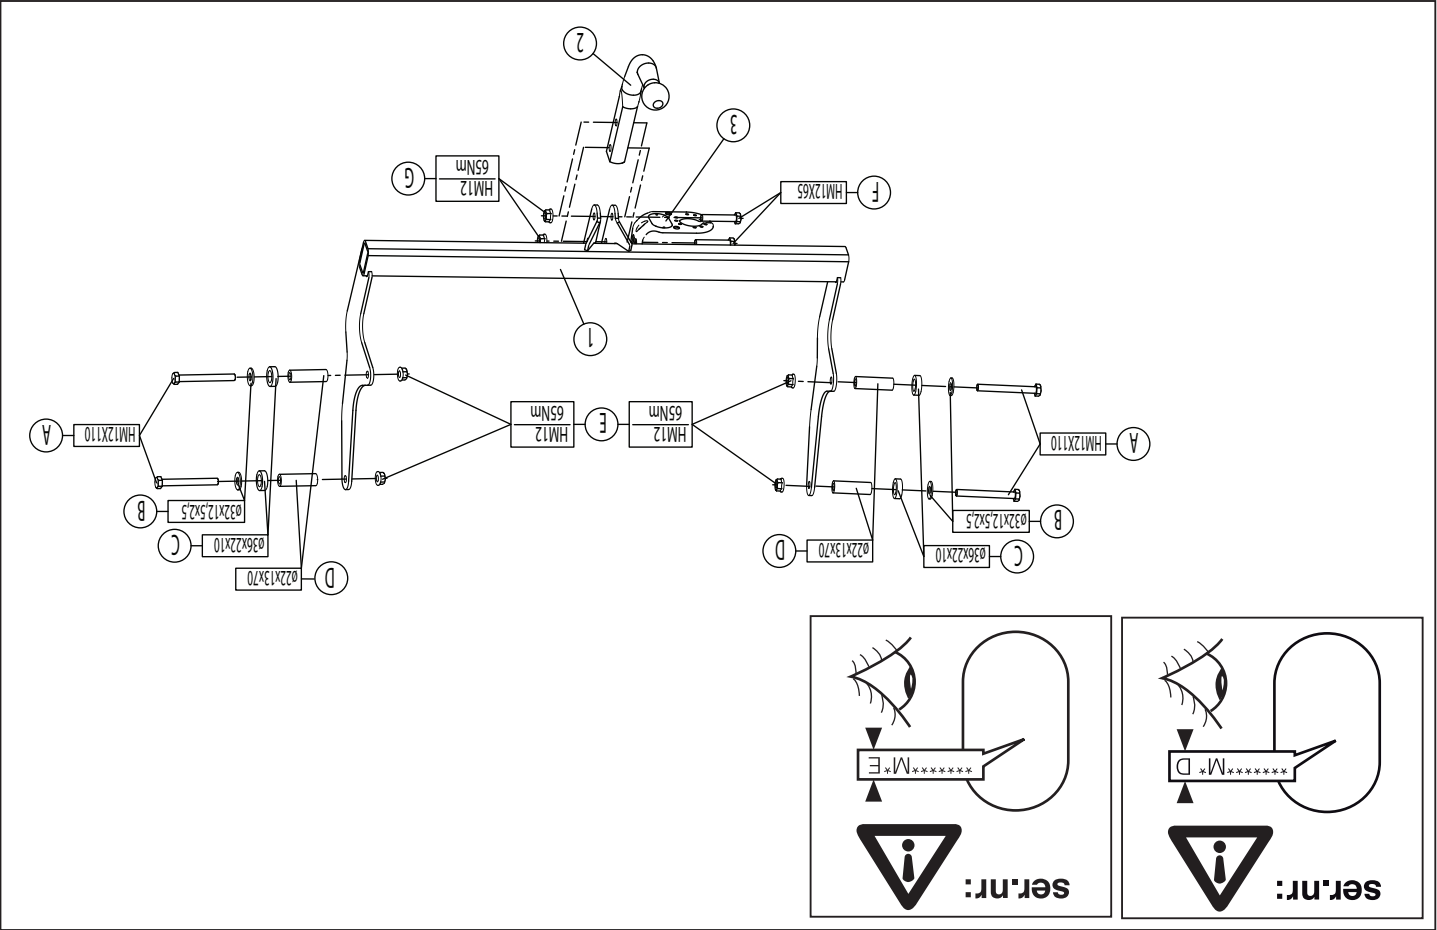

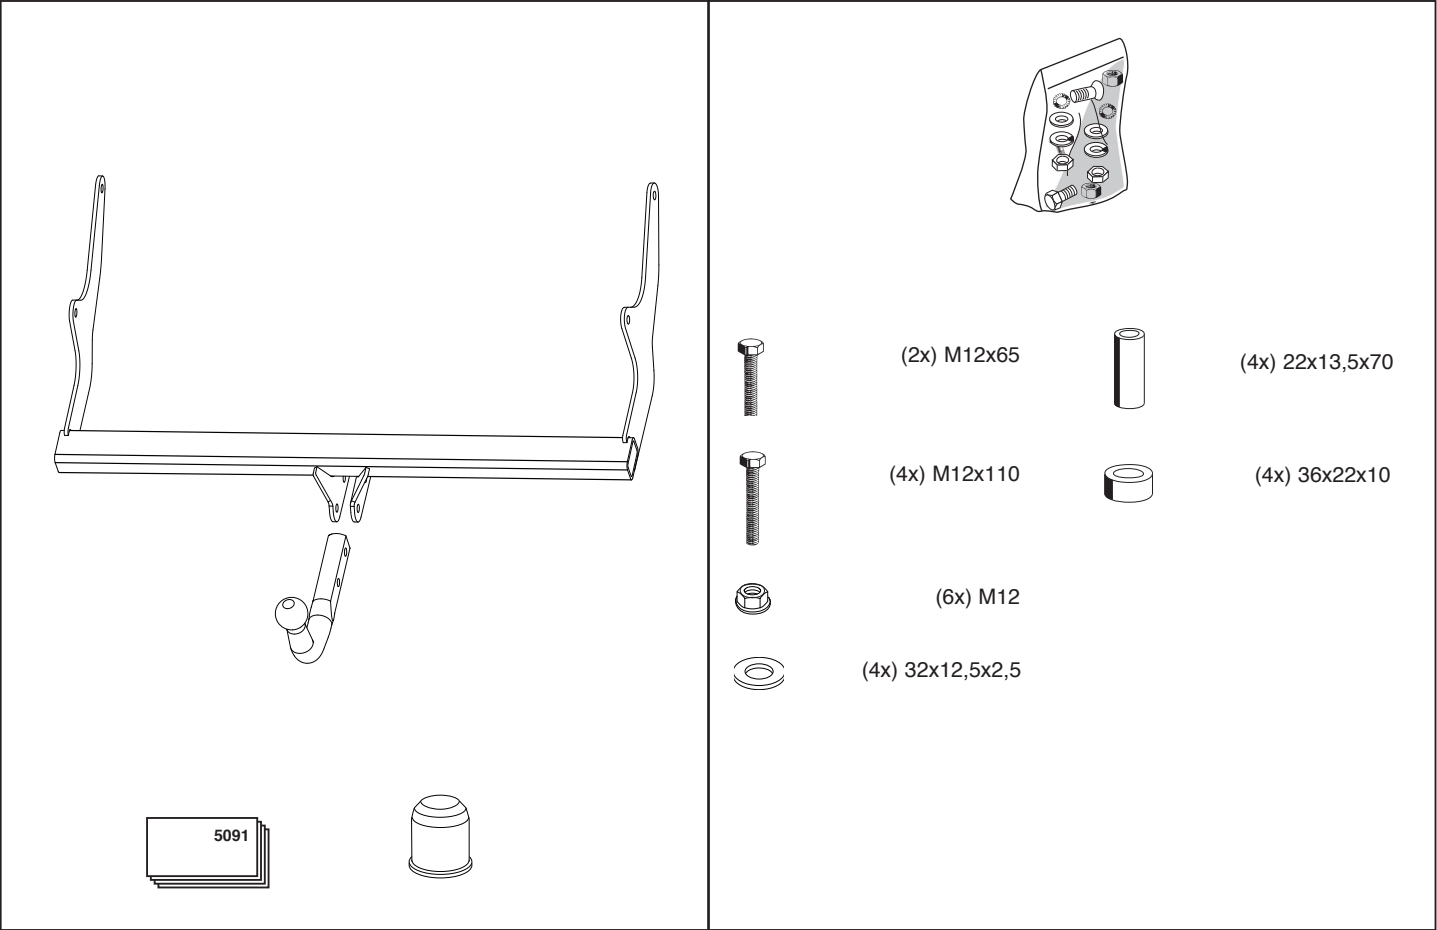

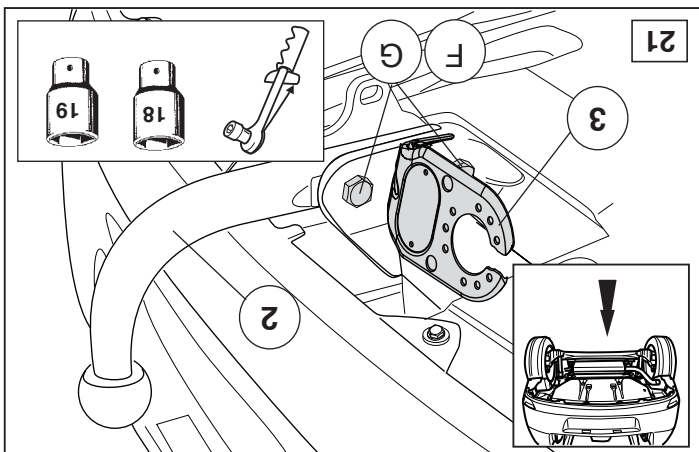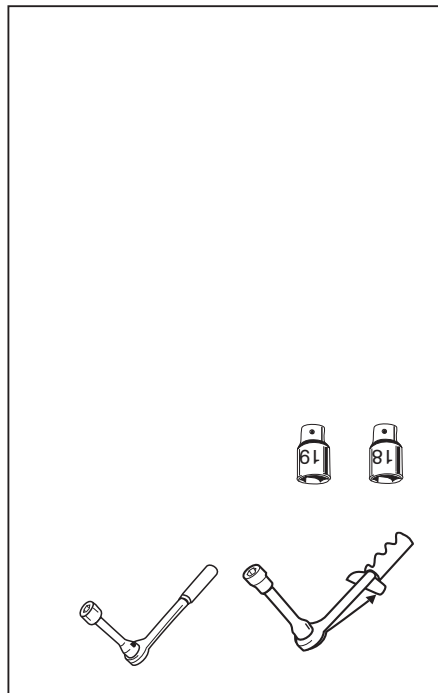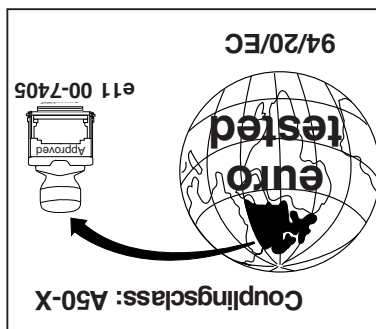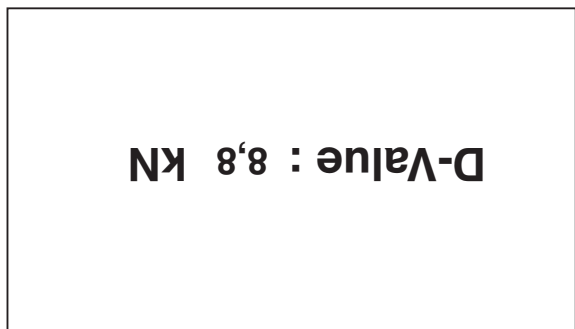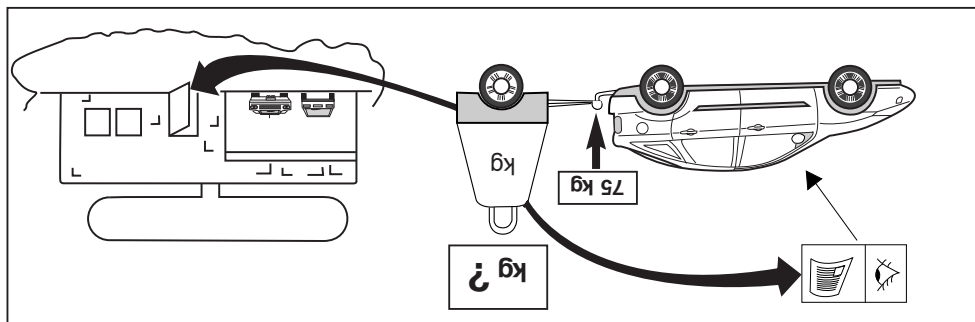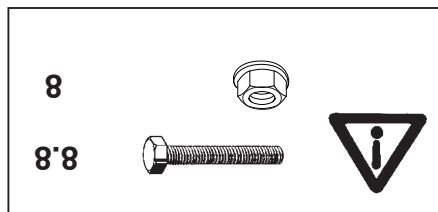

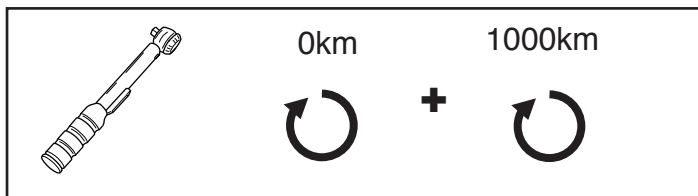

NOTE:

* Should this installation process entail the cutting of the bumper – confirmation **MUST** be obtained by the installation engineer of the customer's acceptance prior to completion. Brink Towing Systems do not accept responsibility for any matters arising as a result of this miscommunication.

All measurements are in mm!





HINWEISE:

* Die für das Fahrzeug zugelassene Anhängelast ist den Fahrzeug Unterlagen zu entnehmen. Bei Änderungen des Fahrzeuggewichtes muß die höchstzulässige Anhängelast gegebenenfalls aus dem D-Wert nachgerechnet werden.









Auskunft hierüber kann Ihr Fachhändler oder der TÜV geben.





* Elektrische Anlage gemäß StVZO anbringen.

© 509170/23-09-2009/5

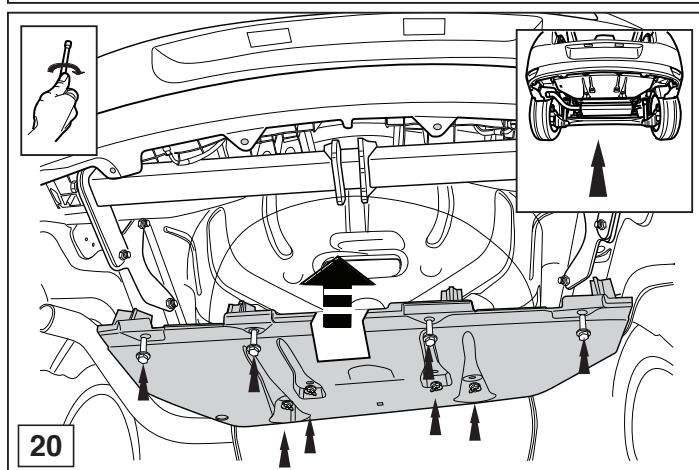
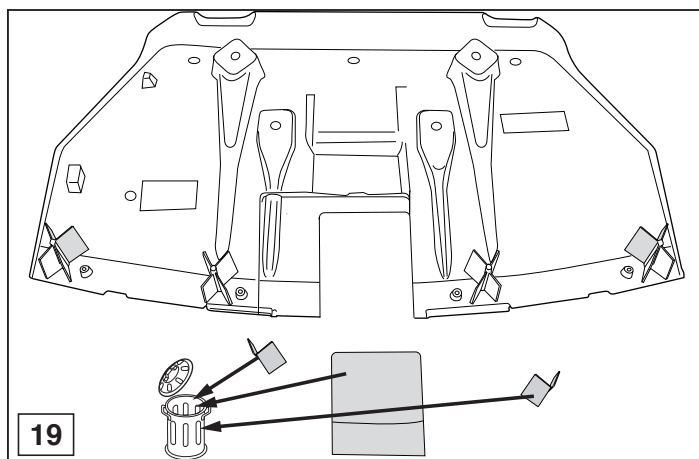
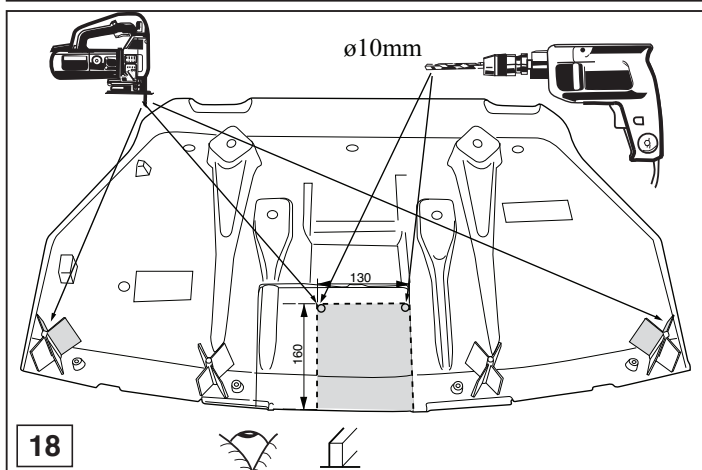
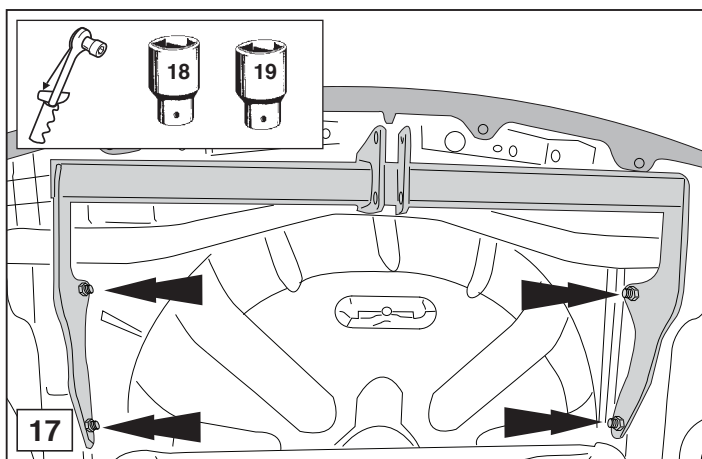


© 509170/23-09-2009/10

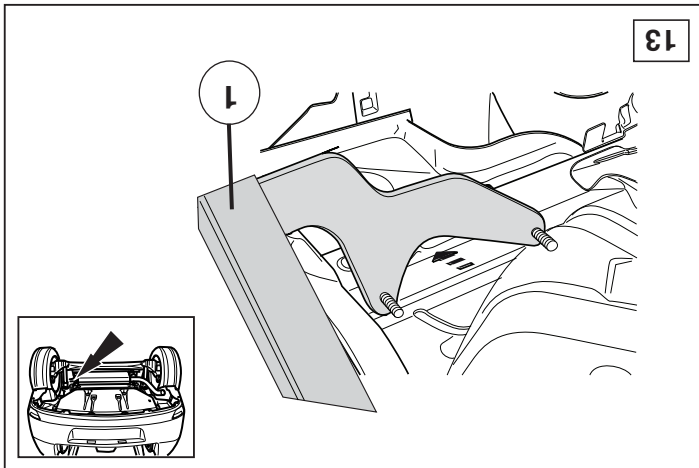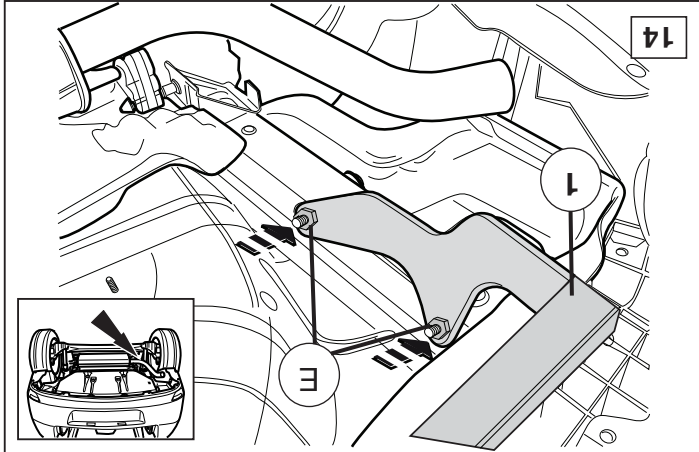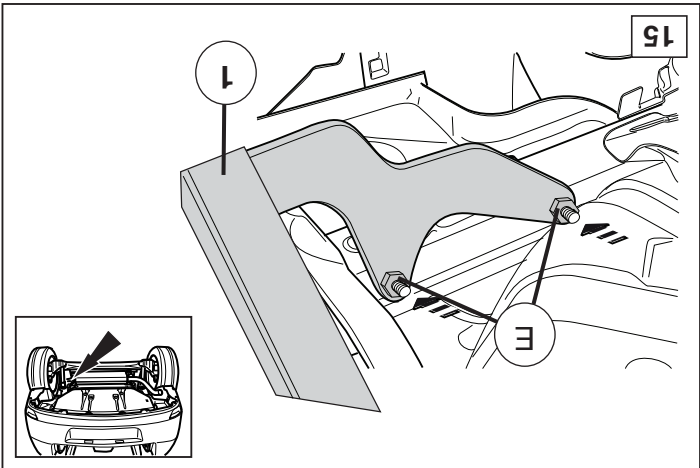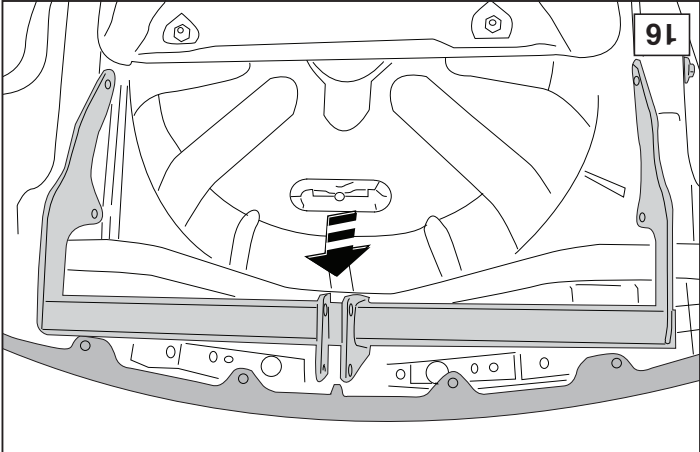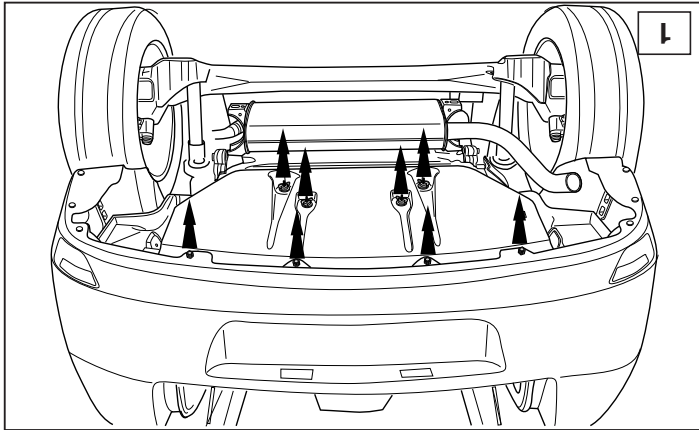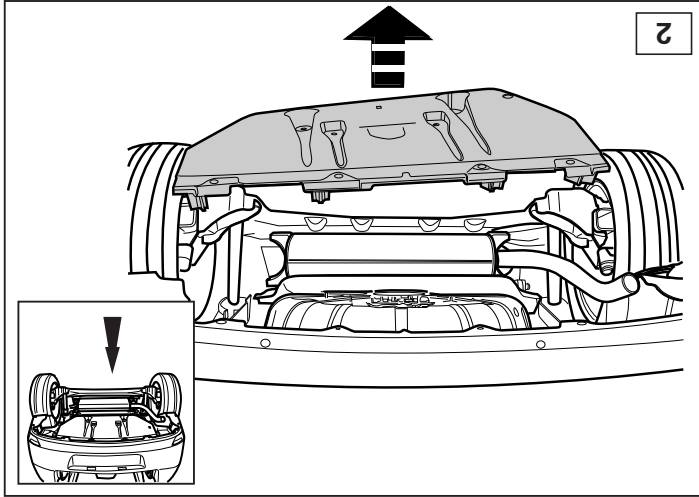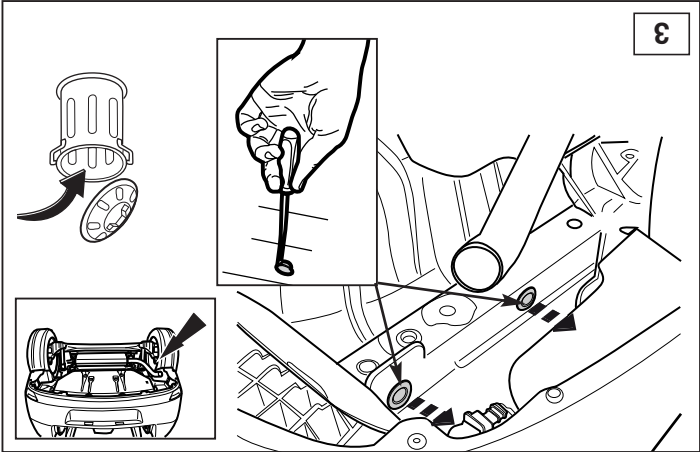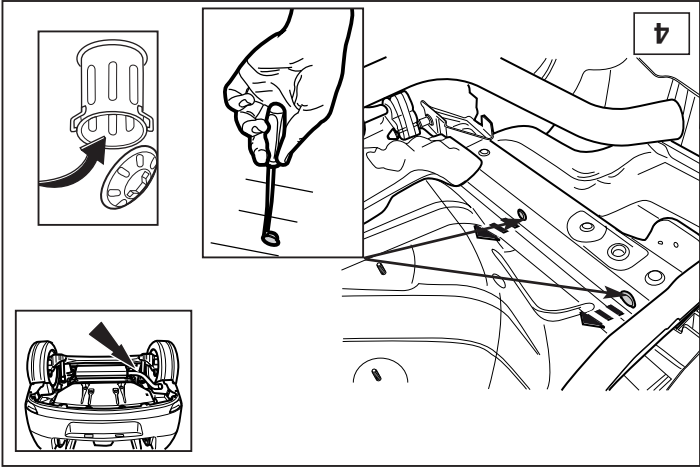

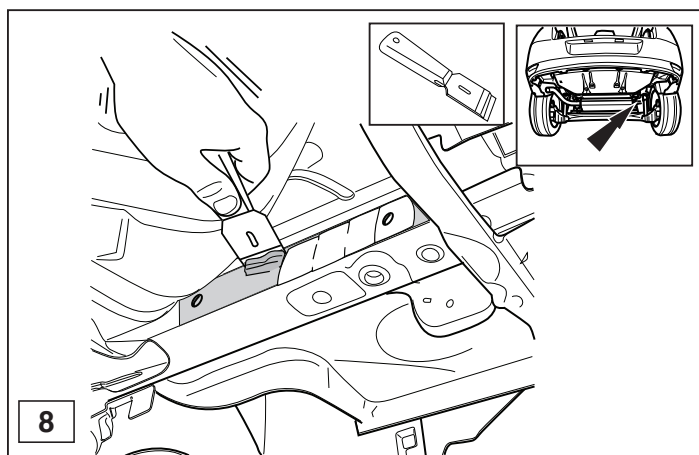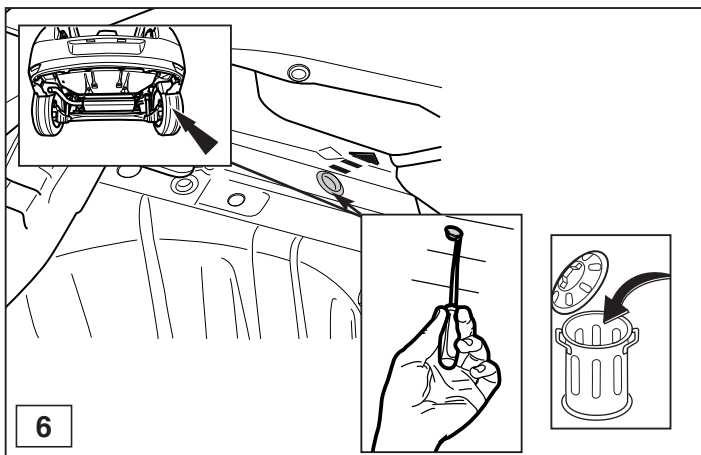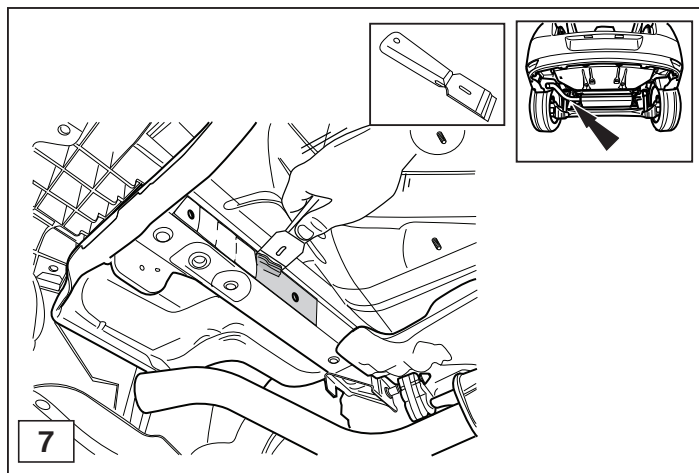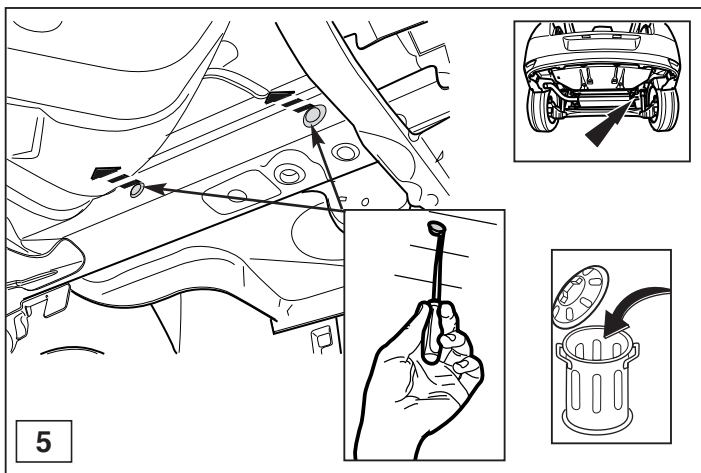

© 509170/23-09-2009/7

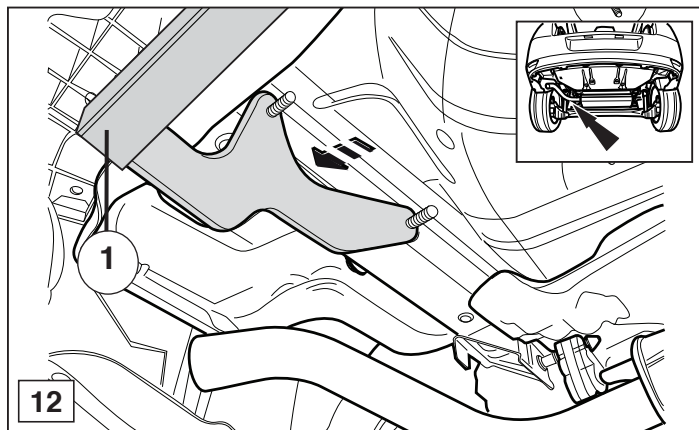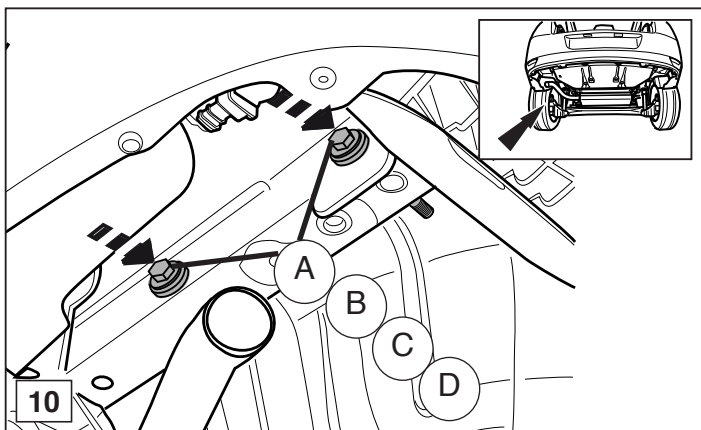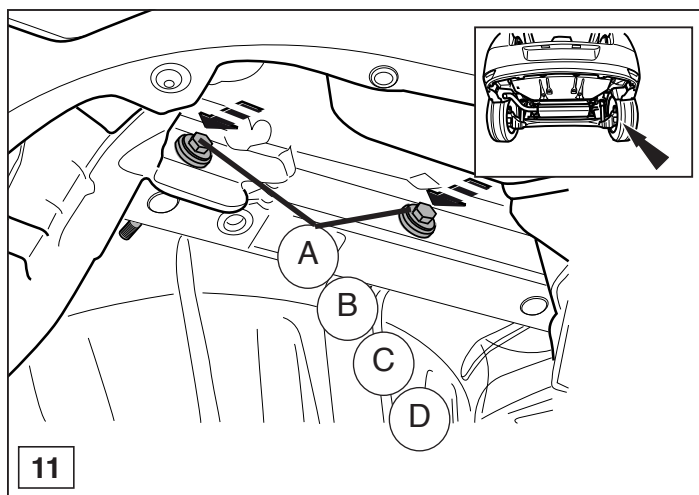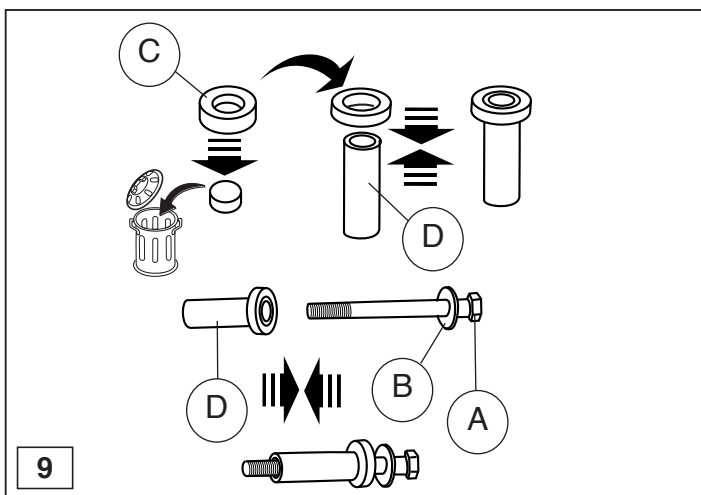

© 509170/23-09-2009/8