


210 01 C

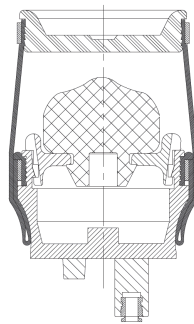

●
bolt or stud

○
hole

⊗
threaded hole

⊗
combinations stud

⊗
air inlet

210 01 C



Cross References	
Contitech	SZ 50-9
Firestone	W02 M58 8035
Goodyear	1 AS-007
Phoenix	C 075185

210 01 C



OEM Part Number	
Monroe	CB0075
RENAULT (300.18 B)	5010 130 797 G
RENAULT (370.26)	5010 130 797 G
RENAULT (340.18 D)	5010 130 797 G
RENAULT (370.32)	5010 130 797 G
RENAULT (260.18)	5010 130 797 G
RENAULT (400.18 D)	5010 130 797 G
RENAULT (320.24 D)	5010 130 797 G
RENAULT (350.34)	5010 130 797 G
RENAULT (370.18)	5010 130 797 G
RENAULT (320.18)	5010 130 797 G
RENAULT (270.18)	5010 130 797 G
RENAULT (250.18 D)	5010 130 797 G
RENAULT (300.18 D)	5010 130 797 G
RENAULT (340.26)	5010 130 797 G