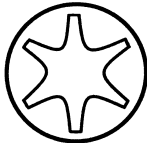
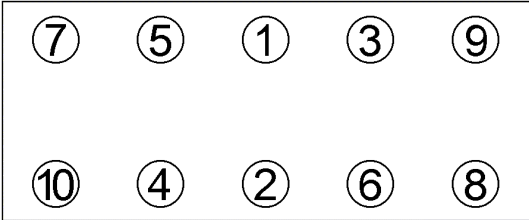


Anziehvorschrift für Zylinderkopf		027.062 passend für / suitable for adaptable à / adaptable a Ford	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
027.850 M12x177+M12x137				
Anziehen/ Tightening/ Serrage/ Apriete	* M12 x 177: 20 Nm 54 Nm ➤ 90° ➤ 90°	* M12 x 137: 20 Nm 54 Nm ➤ 90° ➤ 70°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
✱ 1,27 mm, Ø 86,5 mm, 2 Zähne/Teeth				
Mot.: BHDA, BHDB, BHPA, C9DA, C9DB, C9DC, F9DA, F9DB, FFDA, HCPA, HCPB, KKDA, RTN, RTP, RTQ 1,8 Ltr. TD 55-85 KW (75-115 PS)				
Fiesta, Focus, Galaxy, Mondeo, Transit Connect				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*027.062*	