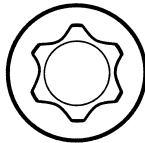
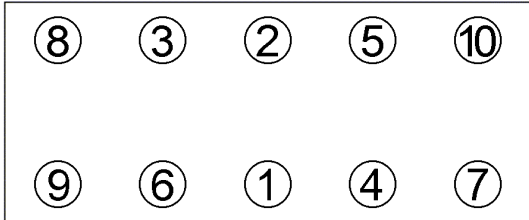


Anziehvorschrift für Zylinderkopf		138.121	 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for	
Instructions de serrage pour culasse		adaptable à / adaptable a	
Prescripciones de apriete para culatas		BMW/Mini	
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
233.370 M12x1,5x200			
Anziehen/ Tightening/ Serrage/ Apriete	* ☐ ➤ ➤	70 Nm 50 Nm 120° 120°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
✚ 1,05 mm, Ø 78,7 mm, 2 Löcher/holes/trous/ agujeros/fori			
Mot.: N47C D16			
F20/21 114d, 116d R55/R56/R57 Cooper D 1.6, One D R60 Cooper D 1.6, DX 1.6, One D			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*138.121*	