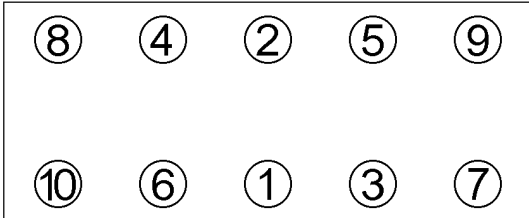


Anziehvorschrift für Zylinderkopf			141.970		 Das Original		
Tightening Instructions for Cylinder Head			passend für / suitable for				
Instructions de serrage pour culasse			adaptable à / adaptable a				
Prescripciones de apriete para culatas			Toyota				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo			Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete				
 022.690 M 10 x 1,5 x 147							
Anziehen/ Tightening/ Serrage/ Apriete			* 25 Nm 49 Nm ➤ 90°				
Zeichenerklärung / Explanations / Explication / Explicacion							
* neue Zylinderkopf-schrauben verwenden		use new cylinder head bolts		utiliser des vis neuves		emplar tornillos nuevos	
★ Warmlauf (80°C)		warm up time (80°C)		chauffage (80°C)		calentamiento (80°C)	
☐ Schrauben einzeln lösen und wieder anziehen		loosen and tighten each bolt		deserrer et serrer vis par vis		aflojar y apretar tornillo a tornillo	
● Setzzeit		relaxation time		durée de tassement		tiempo de espera	
➤ Drehwinkel		torque angle		angle de serrage		ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor							
Mot.: 1ZZ-FE, 3ZZ-FE, 4ZZ-FE 1,4-1,8 Ltr. 71-105 kW (97-143 PS)							
Auris, Avensis, Celica, Corolla, MR2, RAV4 II							
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601				*141.970*			