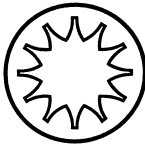
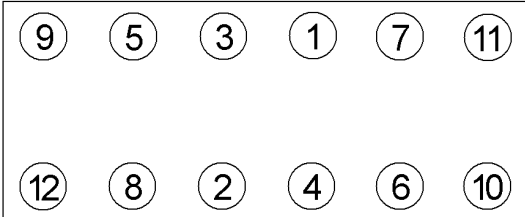


Anziehvorschrift für Zylinderkopf		148.760		 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a			
Instructions de serrage pour culasse		VW			
Prescripciones de apriete para culatas					
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
					
819.875 M 12 x 115					
Anziehen/ Tightening/ Serrage/ Apriete		* ➤ ➤	35 Nm 60 Nm 90° 90°		
Zeichenerklärung / Explanations / Explication / Explicacion					
✱	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
✚ 1,57 mm, Ø 81,9 mm, 2 Löcher/holes/trous/ agujeros					
Mot.: BJJ, BJK, BJL, BJM, CEBA, CEBB, CECA, CECB 2,5 Ltr. TDI					
Crafter					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*148.760*		