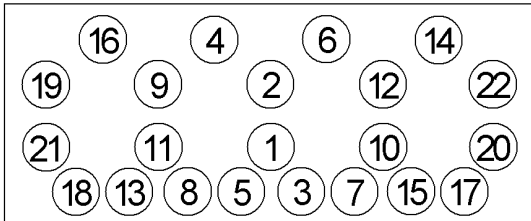


Anziehvorschrift für Zylinderkopf		181.010 passend für / suitable for adaptable à / adaptable a Fiat/Iveco	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
374.180 M 12x1,25x90/163			
Anziehen/ Tightening/ Serrage/ Apriete	* 60 Nm 60Nm ➤ 180°		
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ □ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
÷ 1,6 mm, Ø 96 mm			
Fiat Ducato 2,8 D/Maxi		ab 09/1998>	
Iveco Daily 30.8/35.8		ab 1998>	
Iveco Daily 29 L9/35 S9/35 C9		ab 07/1999>	
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*181.010*	