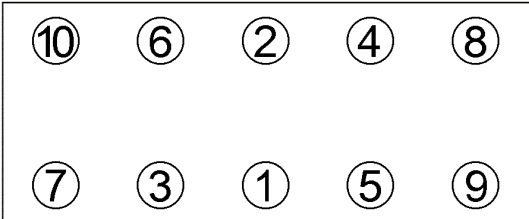


Anziehvorschrift für Zylinderkopf		186.231 passend für / suitable for adaptable à / adaptable a Fiat	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
152.440 M 12x1,25x218			
Anziehen/ Tightening/ Serrage/ Apriete	* 20 Nm 65 Nm ➤ 90° ➤ 90° ➤ 90°		
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Ø: 83 mm; $\frac{1}{8}$: 1,60 mm			
Mot. 182.A7.000, 182.A8.000 1,9 ltr TD 55-74 kW (75-100 PS)			
Brava, Bravo, Marea 3/1996➔			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*186.231*	