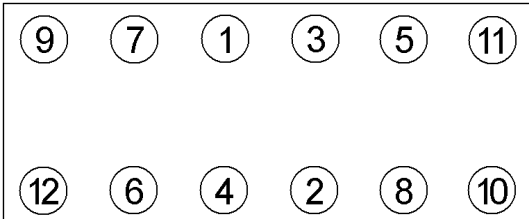


Anziehvorschrift für Zylinderkopf		187.690		
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a	Fiat	
		Das Original		
152.760 M 12x1,25x218		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
Anziehen/ Tightening/ Serrage/ Apriete		*	Fiat: 20 Nm 65 Nm ➤ 90° ➤ 90° ➤ 90°	
		*	Lancia: 65 Nm ➤ 90° ➤ 90° ➤ 90°	
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
83 mm Ø 1,70 mm ± 1 Loch				
Mot: 182.A2.000, 838.A3.000, 838.A7.000 2,4 TD				
Marea ab 1996 ➔ Kappa 07/1996 ➔ 10/2001				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*187.690*	