


Anziehvorschrift für Zylinderkopf		272.620 passend für / suitable for adaptable à / adaptable a Nissan/Renault	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			

Schraubenkopf / Head shape
 Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

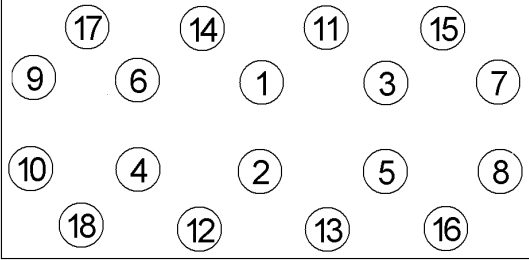

Anziehen/	✱	40 - 49 Nm
Tightening/	☐	98 - 102 Nm
Serrage/	☐	40 - 44 Nm
Apriete	➤	90° - 95°
	➤	90° - 95°

Zeichenerklärung / Explanations / Explication / Explicacion

✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Dicke/Thickness 0,70 mm 2 Kerben/notches

Mot. ZD30DDTi/ZD3/DXi
 3,0 ltr. 2953ccm Diesel
 113/116 kW (154/158 PS)
 Patrol GR11 Y61, Terrano II R20
 Master III
 2000 →

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*272.620*
--	------------------