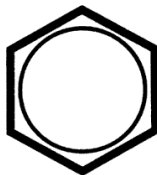
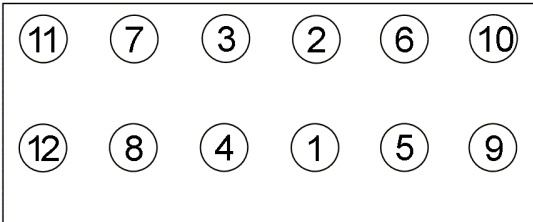


Anziehvorschrift für Zylinderkopf		377.780		Das Original
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a		
		Volvo		
		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
221.490 M 12 x 157				
Anziehen/ Tightening/ Serrage/ Apriete	* 20 Nm 60 Nm ▶ 130°			
Zeichenerklärung / Explanations / Explication / Explicacion				
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
▶	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
B5204T3, B5204T4, B5204T5				
S 60, S 80, V 70 I, V 70 II		2000>2004		
B5234T3, B5234T7				
S 60, S 80, V 70 I, V 70 II		2000>2004		
C 70 Convertible		2000>2004		
B5244SG		V 70 I		2000
377.780				