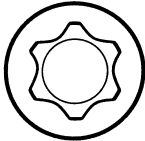
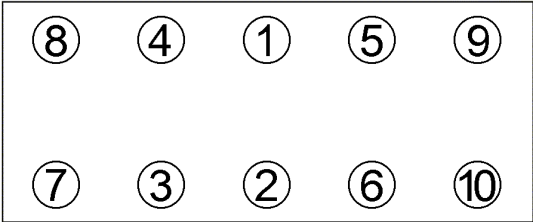


Anziehvorschrift für Zylinderkopf Tightening Instructions for Cylinder Head Instructions de serrage pour culasse Prescripciones de apriete para culatas		447.121 passend für / suitable for adaptable à / adaptable a Renault	 Das Original
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
759.180 M 12 x 113			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ● □ ➤	30 Nm 80°±4° 3 min lösen/loosen desserrer/aflojar 25 Nm + 213°±7°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ □ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) desserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
79 mm Ø, 1,69/1,60 mm ÷			
R 5 Diesel, R 9 Diesel, R 11 Diesel Rapid/Express Diesel (F 404)			
Mot.F8M/700/720/730		ab 1983>	
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*447.121*	