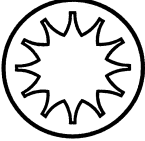
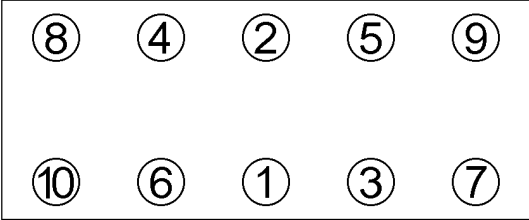


Anziehvorschrift für Zylinderkopf Tightening Instructions for Cylinder Head Instructions de serrage pour culasse Prescripciones de apriete para culatas		473.480 passend für / suitable for adaptable à / adaptable a	 Das Original
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
 022.670 M 9 x 1,25 x 84			
Anziehen/ Tightening/ Serrage/ Apriete	* 17 Nm 34 Nm 90°		
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ □ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) desserrer et serrer vis par vis durée de tassement angle de serrage
	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro		
Motortyp / Engine type / Type de moteur / Tipo de motor ⚙ 0,30 mm Ø 73 mm Mot. 2SZ-FE 1,3 16V Yaris (_CP10) 2002 → Mot. K3-VE 1,3 16V 2000 → Daihatsu Extol, Sirion (M1), Terios (J1), YRV (M2) 1 Stück/piece/pièce/pieza			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*473.480*	