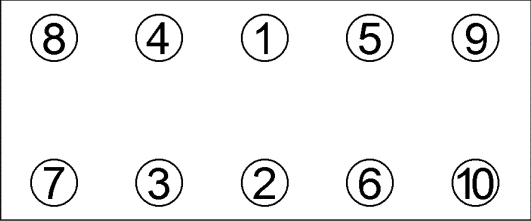


Anziehvorschrift für Zylinderkopf		563.147 passend für / suitable for adaptable à / adaptable a PSA/Fiat	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 758.280 M 11x1,5x175				
Anziehen/ Tightening/ Serrage/ Apriete * 60 Nm □ 20 Nm + 300°				
Zeichenerklärung / Explanations / Explication / Explicacion				
* □ ● ►	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) desserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor Ø: 84,5 mm; 1,27 mm Mot: XU9S, XU5S, XU5J, XU51C, XU5CP, BAY, BAZ BDY, XU5M, XU5JP, BFZ, XU9J2, XU9M, LFW, XU7JP, XU7JB, LFX, LFX Berlingo, BX, Visa, Xantia, Xsara, ZX, Ulysse, 205, 305, 306, 309, 405, 406, 806, Expert, Partner				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*563.147*		