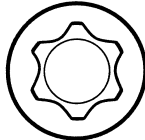
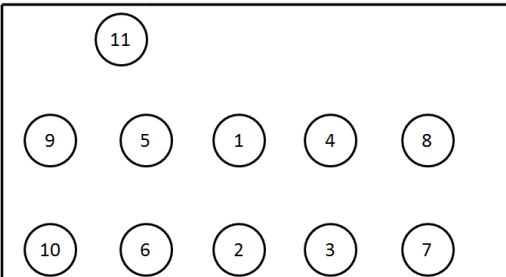


Anziehvorschrift für Zylinderkopf		592.540		 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for		
Instructions de serrage pour culasse		adaptable à / adaptable a		
Prescripciones de apriete para culatas		PSA		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 592.640 M 10x1,5x126				
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ *	Pos. 1-8: 10 Nm Pos. 1-8: 30 Nm Pos. 1-8: 230° Pos. 9-10: 10 Nm Pos. 9-10: 30 Nm Pos. 9-10: 180° Pos. 11: 10 Nm Pos. 11: 20 Nm		
Zeichenerklärung / Explanations / Explication / Explicacion				
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 76,3 mm, $\frac{1}{2}$: 0,7 mm				
Mot: EB2, EB2F				
Peugeot 208				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*592.540*	