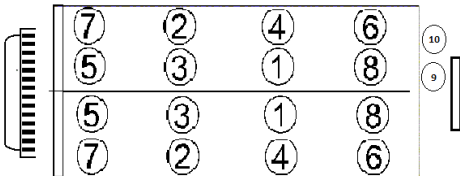


Anziehvorschrift für Zylinderkopf		633.950 passend für / suitable for adaptable à / adaptable a Toyota / Lexus	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
A B				
		9 / 10 = M8		
Anziehen/ Tightening/ Serrage/ Apriete		18 Nm 36 Nm 90° 90° M8 = 30Nm		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Mot.: 1GR-FE / 6GR-FE 4,0 Ltr. V6 Dual VVT-i 176-282 kw (239-282 PS) 08.2009 -> mounting position: left FJ Cruiser, 4Runner, Land Cruiser Prado, Land Cruiser, Coaster, Tundra, Lexus GX400/460				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*633.950*	