



Anziehvorschrift für Zylinderkopf		646.631 passend für / suitable for adaptable à / adaptable a Ford	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			

Schraubenkopf / Head shape
 Tête de vis / Cabeza de tornillo

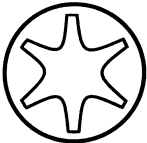

802.870
 M 10x1,5x102

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

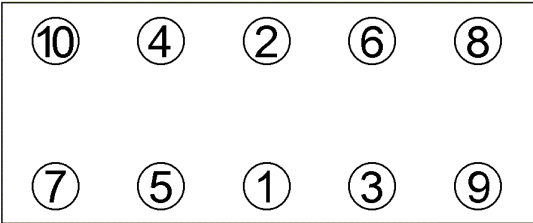

Anziehen/	*	20 - 30 Nm
Tightening/		40 - 50 Nm
Serrage/	➤	90° - 120°
Apriete		

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

 Mot. ZH 16, 4 Cyl., 1,6 l ZETEC 66 kW (90 PS)

 Ford Fiesta 3/1994>, Escort 8/1992>,
 Orion 8/1992➔, Mondeo 2/1993➔

ElringKlinger AG, Max-Eyth-Str.2
 72581 Dettingen / Erms. Tel. 07123/724 601

646.631