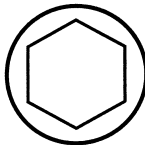
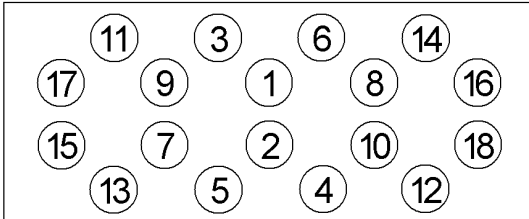


Anziehvorschrift für Zylinderkopf		715.170 passend für / suitable for adaptable à / adaptable a Nissan	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 331.520 M 11x1,25x110				
Anziehen/ Tightening/ Serrage/ Apriete		* 39 Nm tighten ➤ 180° tighten ➤ -360° loosen 39 Nm tighten ➤ 90° tighten ➤ 90° tighten		
Zeichenerklärung / Explanations / Explication / Explicacion				
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 89 mm; 1/2: 0,975 mm				
Mot: YD25DDTi 2,5 ltr. 98-106 kW (133-144 PS)				
Navara (D40) 2,5 dCi Pick up (D22) 2,5 Di				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*715.170*	