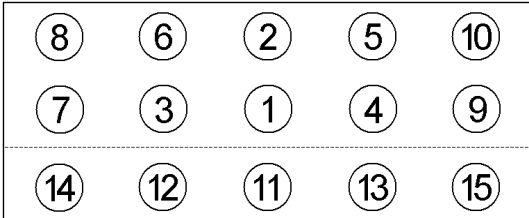


Anziehvorschrift für Zylinderkopf		724.790		 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a		
Instructions de serrage pour culasse		Fiat		
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
760.510 M 12x1,25x134				
Anziehen/ Tightening/ Serrage/ Apriete		M 12: * 50 Nm 100 Nm ➤ 90° ➤ 90°		
		M 8: * 30 Nm		
Zeichenerklärung / Explanations / Explication / Explicacion				
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 83 mm; $\frac{1}{2}$: 1,95 mm				
Mot: 1,7-1,9 ltr Diesel/Turbodiesel 42-68 kW (57-92 PS)				
145, 146, 155, Dedra, Delta, Prisma Ducato, Duna, Fiorino, Palio, Punto, Regata, Ritmo II, Strada, Talento, Temptra, Tipo, Uno				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*724.790*	