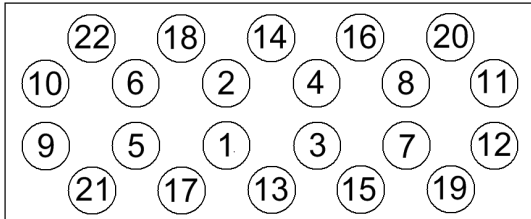


Anziehvorschrift für Zylinderkopf		777.820	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for		
Instructions de serrage pour culasse		adaptable à / adaptable a		
Prescripciones de apriete para culatas		FORD		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
823.290				
M10x160x1,5+M8x1,25x121				
Anziehen/ Tightening/ Serrage/ Apriete	* 10 Nm (1-12 M10) 5 Nm (13-22 M8) 20 Nm (1-12 M10) 10 Nm (13-22 M8) 50 Nm (1-12 M10) ➤ 180° (1-12 M10) 25 Nm (13-22 M8) ➤ 180° (13-22 M8)			
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 91,0 mm; ✱ 1,15 mm; 2 Löcher/notch				
Mot: SAFA;SAFB				
3,2 ltr TDCi				
Transit 09.07 - 08.14				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*777.820*	