


Anziehvorschrift für Zylinderkopf		894.054 passend für / suitable for adaptable à / adaptable a Saab	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			

Schraubenkopf / Head shape
 Tête de vis / Cabeza de tornillo



221.280
M 12x1,75x99

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

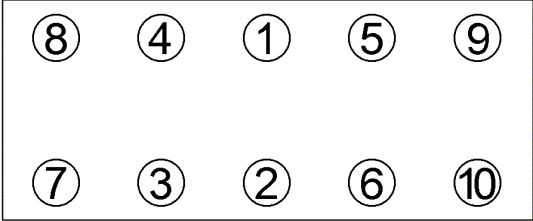

Anziehen/ Tightening/ Serrage/ Apriete	* 60 Nm 80 Nm ➤ 90°
---	---------------------------

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor
 Ø: 91 mm
 Mot: B204E/I/L/R/S, B206I,
 B234E/I/L/R
 2,0 ltr-2,3 ltr
 900 II, 9000, 9-3, 9-5

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*894.054*
--	------------------